

OPERATING MANUAL

Infrared-Thermometer Serie DM-Compact
LT/ LTF/ LTH/ 1M/ 2M/ 3M/ 4M/ G5/ P3/ P7



Technische Änderungen vorbehalten
0141 0315-100 24.06.2022

B+B Thermo-Technik GmbH | Heinrich-Hertz-Str. 4 | D-78166 Donaueschingen
Fon +49 771 83160 | Fax +49 771 831650 | info@bb-sensors.com | bb-sensors.com



OPEARTING MANUAL



CE-Konformitätserklärung

The device meets the following requirements:

EMC: EN 61326-1:2006 (Essential test requirements)
EN 61326-2-3:2006
Safety: EN 61010-1:2001
Laser safety: EN 60825-1:2007



The product meets the requirements of the EMC Directive 2004/108/EC and the Low Voltage Directive 2006/95/EC.

This product complies with the requirements of Directive 2011/65/EU of the European Parliament and of the Council of 8 June 2011 on the restriction of the use of certain hazardous substances in electrical and electronic equipment.

Warranty

Should equipment defects occur despite careful quality control, please contact our customer service immediately. The warranty period is 24 months from the date of delivery. After this period, the manufacturer gives a 6-month warranty on all repaired or replaced equipment components in the event of repair. The warranty does not cover damage caused by improper handling, opening of the device or violence. The manufacturer is not liable for any consequential damages or in the event of improper use of the product. In the event of a device fault during the warranty period, the device will be repaired or calibrated free of charge. The freight costs are borne by the respective sender. The manufacturer reserves the right to exchange the device or parts of the device instead of a repair. If the defect is due to misuse or violence, the costs will be invoiced by the manufacturer. In this case, a cost estimate will be prepared on request before the start of the repair.

Read this instruction manual carefully before the first use of the device.

In the interest of technical development, the manufacturer reserves the right to change the specifications specified in this manual.

► References to other chapters

Important notes are highlighted in grey



OPEARTING MANUAL



Inhaltsverzeichnis

1	General Information	7
1.1	Description	7
1.2	Warranty	8
1.3	Scope of Supply	8
1.4	Maintenance	8
1.5	Model Overview	9
1.6	Factory Default Settings	11
2	Technical Data	13
2.1	General Specifications	13
2.2	Electrical Specifications	14
2.3	Measurement Specifications [LT-Models]	15
2.4	Measurement Specifications [fast/ hot]	16
2.5	Measurement Specifications [1M/ 2M/ 3M / 4M -Models]	17
2.6	Messtechnische Spezifikationen [G5/ P7-Modelle]	20
2.7	Optical Charts	21
2.8	CF-Lens and Protective window	33



OPERATING MANUAL



3	Mechanical Installation	37
3.1	Mounting Accessories.....	41
3.2	Air Purge Collars	42
3.3	Further Accessories.....	44
4	Electrical Installation.....	50
4.1	Cable Connections.....	50
4.1.1	Designation [models LT/ G5/ P3/ P7]	50
4.1.2	Designations [Models 1M/ 2M/ 3M].....	51
4.1.3	Designations [Models 4M].....	52
4.1.4	Power Supply	53
4.1.5	Cable Assembling	54
4.2	Ground Connections.....	55
4.2.1	1M, 2M, 3M Models.....	55
4.2.2	4M Model.....	55
4.2.3	LT, LTF, LTH, G5, P3, P7 Models.....	56
4.3	Exchange of the Sensing Head.....	57
4.3.1	Entering of the Calibration Code.....	57
4.3.2	Sensing Head Cable	58
5	Outputs and Inputs.....	59



OPERATING MANUAL



5.1	Analog Outputs	59
5.1.1	Output channel 1	59
5.1.2	Output channel 2 [LT/ G5/ P3/ P7 only]	59
5.2	Digital Interfaces	60
5.3	Relay Outputs	60
5.4	Functional Inputs (not for 4M Models)	61
5.5	I/O pins (only for 4M Models)	62
5.6	Alarms	63
5.6.1	Output channel 1 and 2 [channel 2 on LT/ G5/ P3/ P7 only]	63
5.6.2	Open collector output / AL2	64
6	Operating	65
6.1	Sensor Setup	65
6.2	Error Messages	76
7	Software CompactConnect/ CompactPlus Connect	77
7.1	Installation	77
7.2	Communication Settings	79
7.2.1	Serial Interfaces	79
7.2.2	Protocol	79
7.2.3	ASCII-Protocol	79



OPERATING MANUAL



	7.2.4	Saving of parameter settings.....	80
8		Basics of Infrared Thermometry	81
9		Emissivity.....	82
	9.1	Definition	82
	9.2	Determination of unknown Emissivity	82
	9.3	Characteristic Emissivity	83



OPERATING MANUAL



1 General Information

1.1 Description

Thank you for choosing the B+B infrared thermometer of the DM series. The sensors of the DM series are noncontact infrared temperature sensors. They calculate the surface temperature based on the emitted infrared energy of objects [► 9 Basics of Infrared Thermometry]. The sensor housing of the DM head is made of stainless steel (IP65/ NEMA-4 rating) – the sensor electronics is placed in a separate box made of die casting zinc.

The DM sensing head is a sensitive optical system. Please use only the thread for mechanical installation.

- **Avoid abrupt changes of the ambient temperature.**
- **Avoid mechanical violence on the head – this may destroy the system (expiry of warranty).**
- **If you have any problems or questions, please contact our service department**

Read the manual carefully before the initial start-up. The producer reserves the right to change the herein described specifications in case of technical advance of the product.

All accessories can be ordered according to the referred part numbers in brackets [].



OPERATING MANUAL



1.2 Warranty

Each single product passes through a quality process. Nevertheless, if failures occur please contact the customer service at once. The warranty period covers 24 months starting on the delivery date. After the warranty is expired the manufacturer guarantees additional 6 months warranty for all repaired or substituted product components. Warranty does not apply to damages, which result from misuse or neglect. The warranty also expires if you open the product. The manufacturer is not liable for consequential damage or in case of a non-intended use of the product. If a failure occurs during the warranty period the product will be replaced, calibrated or repaired without further charges. The freight costs will be paid by the sender. The manufacturer reserves the right to exchange components of the product instead of repairing it. If the failure results from misuse or neglect, the user has to pay for the repair. In that case you may ask for a cost estimate beforehand.

1.3 Scope of Supply

- ❖ DM sensing head with connection cable and electronic box
- ❖ Mounting nut
- ❖ Operating Manual

1.4 Maintenance

Lens cleaning: Blow off loose particles using clean compressed air. The lens surface can be cleaned with a soft, humid tissue (moistened with water) or a lens cleaner (e.g. Purosol or B+W Lens Cleaner)..

ATTENTION: Never use cleaning compounds which contain solvents (neither for the lens nor for the housing).



OPEARTING MANUAL



1.5 Model Overview

The sensors of the DM series are available in the following basic versions:

Model	Model code	Measuring Range	Spectral Range	Typical application
DMxxx LT	21 LT	-50 .. 600 °C	8 .. 14 µm	Non metallic surfaces
	151 LT			
	201 LT	-50 .. 975 °C		
DMxxx Fast	151 F	-50 bis 975 °C	8 .. 14 µm	Non metallic surfaces fast processes
	251 F			
DMxxx Hot	21 H	-40 bis 975 °C	8 .. 14 µm	Non metallic surfaces High ambient temperatures (up to 250 °C)
	101 H			
DMxxx 1M	xxx 1ML	485 bis 1050 °C	1 µm	Metallic and ceramic surfaces
	xxx 1MH	650 bis 1800 °C		
	xxx 1MH1	800 bis 2200 °C		
DMxxx 2M	xxx 2ML	250 bis 800 °C	1,6 µm	Metallic and ceramic surfaces
	xxx 2MH	385 bis 1600 °C		
	xxx 2MH1	490 bis 2000 °C		
DM xxx 3M	xxx 3ML	50 bis 400 °C	2,3 µm	Metals at relative low object temperatures (from 50 °C)
	xxx 3MH	100 bis 600 °C		
	xxx 3MH1	150 bis 1000 °C		
	xxx 3MH2	200 bis 1500 °C		
	xxx 3MH3	250 bis 1800 °C		
DMxxx 4M	xxx 4ML	0 bis 500 °C	2,2 .. 6 µm	Metals at relative low object temperatures (> 0 °C) and fast processes



OPEARTING MANUAL



DMxxx G5	xxx G5L	100 bis 1200 °C	5,0 µm	Glass Temperatures
	xxx G5H	250 bis 1650 °C		
DMxxx P3	xxx P3	50 bis 400 °C	3,43 µm	Temperatures of plastic thin films
DMxxx P7	xxx P7	0 bis 710 °C	7,9 µm	

In the following chapters of this manual, you will find only the short model codes. On the 1M, 2M, 3M, 4M and G5 models the whole measurement range is split into several sub ranges (L, H, H1 etc.)..



OPEARTING MANUAL



1.6 Factory Default Settings

The unit has the following presetting at time of delivery

Signal output object temperature	0-5 V	Unter Smart Averaging oder Adaptiver Mittelwertbildung versteht man eine dynamische Anpassung der Mittelwertbildung an steile Signalfanken [Aktivierung nur über Software möglich]. ► Anhang C – Adaptive Mittelwertbildung
Signal output channel 2 (only for 4M)	Internal head temperature: 0-5 V = 0-70 °C	
Emissivity	0,970 [LT/ G5/ P3/ P7] 1,000 [1M/ 2M/ 3M/ 4M]	
Transmissivity	1,000	
Averaging (AVG)	0,2 s LT151F/ LT251F: 0,1 s 1M/ 2M/ 3M/ 4M: 0,001 s	
Smart Averaging	Inactive LT151F, LT251F: active	
Peak Hold (MAX)	Inactive	
Valley Hold (MIN)	Inactive	

	LT	1ML	1MH	1MH1	2ML	2MH	2MH1	3ML	3MH
Lower limit temperature range [°C]	0	485	650	800	250	385	490	50	100
Upper limit temperature range [°C]	500	1050	1800	2200	800	1600	2000	400	600
Lower alarm limit [°C] (normally closed)	30	600	800	1200	350	500	800	100	250
Upper alarm limit [°C] (normally open)	100	900	1400	1600	600	1200	1400	300	500



OPEARTING MANUAL



	3MH1	3MH2	3MH3	4ML	G5L	G5H	P3	P7
Lower limit temperature range [°C]	150	200	250	0	100	250	50	0
Upper limit temperature range [°C]	1000	1500	1800	500	1200	1650	400	710
Lower alarm limit [°C] (normally closed)	350	550	750	30	200	350	70	30
Upper alarm limit [°C] (normally open)	600	1000	1200	100	500	900	200	100
Lower limit signal output	0 V							
Upper limit signal output	5 V							
Temperature unit	°C							
internal head temperature probe	internal head temperature probe							
Baud rate [kBaud]	115 921,6 [4M]							

➤ Smart Averaging means a dynamic average adaptation at high signal edges.



OPEARTING MANUAL



2 Technical Data

2.1 General Specifications

	Sensing Head	Elektronic Box
Environmental rating	IP65 (NEMA-4)	IP65 (NEMA-4)
Operating Temperature	siehe: Messtechnische Spezifikation	-20...85 °C ¹⁾
Storage temperature	siehe: Messtechnische Spezifikation	-40...85 °C
Relative humidity	10...95 %, nicht kondensierend	
Material (Sensing Head)	Edelstahl	Zink, gegossen
Dimensions	28 mm x 14 mm bzw. 32 mm x 14 mm, M12x1	89 mm x 70 mm x 30 mm
Dimensions hot/ P3/ P7	55 mm x 29,5 mm, M18x1 (mit Massivgehäuse)	
Weight	40 g	420 g
Weight hot / P3 / P7	205 g (mit Massivgehäuse)	
Cable Length	1 m (only LT02, LT15, LT22, fast), 3 m (Standard @ hot, 1M, 2M, 3M, 4M, G5, P3 und P7) ¹⁾ , 8 m and 15 m (price supplement)	¹⁾ The 3M models are only available with 3 m cable length
Cable diameter	2,8 mm	
Ambient temperature for cable	max. 180 °C [High temperature cable for DMhot: 250 °C]	
Vibration	IEC 68-2-6: 3G, 11 – 200 Hz, jede Achse	
Schock	IEC 68-2-27: 50G, 11 ms, jede Achse	
Druckfestigkeit (Messkopf)	8 bar	
Software	CompactConnect / CompactPlus Connect	



OPEARTING MANUAL



2.2 Electrical Specifications

Power Supply	8–36 VDC 4M: 8-30 VDC / 5 V USB / max. 1,2 W
Consumption	max. 100 mA
Outputs/ analog	(For 4M output 1 and 2 are freely selectable: Analog mA/mV, Alarm mA/mV, TCK)
Channel 1	selectable: 0/ 4–20 mA, 0–5/ 10 V, thermocouple (J or K) or alarm output (Signal source: object temperature)
Channel 2 [LT/ G5/ P3/ P7 only]	Head temperature [-20...180 °C/ -20...250 °C on 21H and 101Hot] as 0–5 V or 0–10 V output or alarm output (Signal source switchable to object temperature or electronic box temperature if used as alarm output)
Alarm output	Open collector output (NPN type) at Pin AL2 [24 V/ 50 mA]
Output impedances	
mA	max. loop resistance 500 Ω
mV	min. 100 k Ω load impedance
Thermocouple	20 Ω
Digital interfaces	USB, RS232, RS485, Profibus DP, Ethernet, Modbus RTU (optional plug-in modules)
Relay outputs	2 x 60 VDC/ 42 VACRMS, 0,4 A; optically isolated (optional plug-in module)
Functional inputs / I/O Pins	F1-F3; software programmable for the following functions: • external emissivity adjustment • ambient temperature compensation • trigger (reset of hold functions) Input impedance F2 and F3: 43 k Ω 4M: I/O1-3 pins freely selectable via software



OPEARTING MANUAL

2.3 Measurement Specifications [LT-Models]

	<u>DM21</u>	<u>DM151</u>	<u>DM201</u>
Temperature range (scalable)	-50...600 °C	-50...600 °C	-50...975 °C
Ambient temperature (head)	-20...130 °C	-20...180 °C	-20...180 °C
Storage temperature (head)	-40...130 °C	-40...180 °C	-40...180 °C
Spectral range	8...14 µm	8...14 µm	8...14 µm
Optical resolution	2:1	15:1	22:1
System accuracy ^{1) 2) 3)}	±1°C or ±1% ³⁾		
Repeatability ^{1) 3)}	±0,5°C or ±0,5% ³⁾		
Temperature coefficient ⁴⁾	±0,05 K/ K or ±0,05 %/ K		
NETD ^{3) 5)}	0,1 K	0,05 K	0,05 K
Response time (95 % signal)	150 ms	150 ms	150 ms
Warm-up time	10 min	10 min	10 min
Emissivity/ Gain	0,100...1,100 (adjustable via programming keys or software)		
Transmissivity	0,100...1,100 (adjustable via programming keys or software)		
Signal processing	Average, peak hold, valley hold (adjustable via programming keys or software)		

¹⁾ at ambient temperature 23 ± 5 °C; whichever is greater; at object temperatures >0 °C; response time=1s

²⁾ Accuracy for thermocouple output: ±2,5°C or ±1%

³⁾ $\varepsilon = 1$

⁴⁾ for ambient temperatures (head) <18 °C and >28 °C; whichever is greater

⁵⁾ at time constant 200 ms and an object temperature of 25 °C

On the DM21 models the head cable must not be moved during the measurement.



OPEARTING MANUAL



2.4 Measurement Specifications [fast/ hot]

	DM151F	DM251F	DM21H	DM101H
Temperature range (scalable)	-50...975 °C		-40...975 °C	
Ambient temperature (head)	-20...120 °C		-20...250 °C	
Storage temperature (head)	-40...120 °C		-40...250 °C	
Spectral range	8...14 μm			
Optical resolution	15:1	25:1	2:1	10:1
System accuracy ^{1) 2) 3)}	±2°C or ±1%		±1,5°C or ±1%	
Repeatability ^{1) 3)}	±0,75 °C or ±0,75 %		±0,5 °C or ±0,5 %	
Temperature coefficient ⁴⁾	±0,05 K/ K or ±0,05 %/ K			
NETD ^{3) 5)}	200 mK	400 mK	250 mK	
Response time (95 % signal)	9 ms	6 ms	100 ms	
Warm-up time	10 min.			
Emissivity/ Gain	0,100...1,100 (adjustable via programming keys or software)			
Transmissivity	0,100...1,100 (adjustable via programming keys or software)			
Signal processing	Average, peak hold, valley hold (adjustable via programming keys or software)			

¹⁾ at ambient temperature 23.5 °C; whichever is greater; at object temperatures ≥ 20 °C; response time=1s

²⁾ Accuracy for thermocouple output: ±2,5 °C or ±1%

³⁾ ε = 1

⁴⁾ for ambient temperatures (head) <18 °C and >28 °C; whichever is greater

⁵⁾ at time constant 100 ms and an object temperature of 25 °C

On the hot models [21H/ 101H] the head cable must not be moved during the measurement.



OPEARTING MANUAL



2.5 Measurement Specifications [1M/ 2M/ 3M / 4M -Models]

	<u>1ML</u>	<u>1MH</u>	<u>1MH1</u>	<u>2ML</u>
Temperature range (scalable)	485...1050 °C	650...1800 °C	800...2200 °C	250...800 °C
Ambient temperature (head)	-20...100 °C			-20...125 °C
Storage temperature (head)	-40...100 °C			-40...125 °C
Spectral range	1,0 µm			1,6 µm
Optical resolution	40:1	75:1		40:1
System accuracy ^{1) 2) 3)}	±(0,3 % TMeas +2°C)			
Repeatability ^{1) 3)}	±(0,1 % TMeas +1 °C)			
Temperature coefficient ⁴⁾	±0,05 K/ K or ±0,05 %/ K			
NETD ^{3) 5)}	100 mK	140 mK	85 mK	90 mK
Response time (95 % signal)	1 ms ⁶⁾			
Warm-up time	10 min			
Emissivity/ Gain	0,100...1,100 (adjustable via programming keys or software)			
Transmissivity	0,100...1,100 (adjustable via programming keys or software)			
Signal processing	Average, peak hold, valley hold (adjustable via programming keys or software)			

¹⁾ at ambient temperature 23.5 °C; whichever is greater; at object temperatures ≥ 20 °C; response time=1s

²⁾ Accuracy for thermocouple output: ±2,5 °C or ±1%

³⁾ ε = 1

⁴⁾ for ambient temperatures (head) <18 °C and >28 °C; whichever is greater- ⁵⁾ at time constant 100 ms and an object temperature of 25 °C



OPEARTING MANUAL



	2MH	2MH1	3ML	3MH
Temperature range (scalable)	385...1600 °C	490...2000 °C	50...400 °C ¹⁾	100...600 °C ¹⁾
Ambient temperature (head)	-20...125 °C		-20...85 °C	
Storage temperature (head)	-40...125 °C		-40...125 °C	
Spectral range	1,6 µm		2,3 µm	
Optical resolution	75:1		22:1	33:1
System accuracy ^{1) 2) 3)}	±(0,3 % TMeas +2°C)			
Repeatability ^{1) 3)}	±(0,1 % TMeas +1 °C)			
Temperature coefficient ⁴⁾	±0,05 K/ K or ±0,05 %/ K			
NETD ^{3) 5)}	90 mK	160 mK	600 mK	60 mK
Response time (95 % signal)	1 ms			
Warm-up time	10 min			
Emissivity/ Gain	0,100...1,100 (adjustable via programming keys or software)			
Transmissivity	0,100...1,100 (adjustable via programming keys or software)			
Signal processing	Average, peak hold, valley hold (adjustable via programming keys or software)			

¹⁾ at ambient temperature 23.5 °C; whichever is greater; at object temperatures ≥ 20 °C; response time=1s

²⁾ Accuracy for thermocouple output: ±2,5°C or ±1%

³⁾ ε = 1

⁴⁾ for ambient temperatures (head) <18 °C and >28 °C; whichever is greater-

⁵⁾ at time constant 100 ms and an object temperature of 25 °C

⁶⁾ with dynamic adaptation at low signal levels

Technische Änderungen vorbehalten

0141 0315-100

17.08.2015

B+B Thermo-Technik GmbH | Heinrich-Hertz-Str. 4 | D-78166 Donaueschingen
Fon +49 771 83160 | Fax +49 771 831650 | info@bb-sensors.com | bb-sensors.com



OPEARTING MANUAL



	3MH1	3MH2	3MH3	4ML
Temperature range (scalable)	150...1000 °C ¹⁾	200...1500 °C ¹⁾	250...1800 °C ¹⁾	0...500 °C
Ambient temperature (head)	-20...85 °C			0...70 °C
Storage temperature (head)	-40...125 °C			-40...85 °C
Spectral range	2,3 µm			2,2-6 µm
Optical resolution	75:1			10:1
System accuracy ^{1) 2) 3)}	±(0,3 % TMeas +2 °C)			
Repeatability ^{1) 3)}	±(0,1 % TMeas +1 °C)			
Temperature coefficient ⁴⁾	±0,05 K/ K or ±0,05 %/ K			±0,05 K/ K or ±0,03 %/ K ⁶⁾
NETD ^{3) 5)}	110 mK ⁷⁾	120 mK ⁷⁾	100 mK ⁷⁾	120 mK ⁸⁾
Response time (95 % signal)	1 ms ⁹⁾			300 µs / 90 µs ¹⁰⁾
Warm-up time	10 min			
Emissivity/ Gain	0,100...1,100 (adjustable via programming keys or software)			
Transmissivity	0,100...1,100 (adjustable via programming keys or software)			
Signal processing	Average, peak hold, valley hold (adjustable via programming keys or software)			

¹⁾ Specification valid at T_{Object} ≥ start of measurement range + 50 °C

²⁾ at ambient temperature 23 ± 5 °C; whichever is greater; response time=1s

³⁾ Accuracy for thermocouple output: ±2,5 °C or ±1%

⁴⁾ = 1

⁵⁾ for ambient temperatures (head) <18 °C and >28 °C; whichever is greater

⁶⁾ for ambient temperatures > 10 °C; whichever is greater

⁷⁾ at time constant 1 ms and object temperature=start of measurement range + 50 °C

⁸⁾ at time constant 1 ms and T_{Obj} = 50 °C

⁹⁾ with dynamic adaptation at low signal levels

¹⁰⁾ 90 µs exposure time



OPEARTING MANUAL



2.6 Messtechnische Spezifikationen [G5/ P7-Modelle]

	G5L	G5H	P3	P7
Temperature range (scalable)	100...1200 °C	250...1650 °C	50...400 °C	0...710 °C
Ambient temperature (head)	-20...85 °C	0...75 °C	-20...85 °C	
Storage temperature (head)	-40...85 °C			
Spectral range	5,0 µm	3,43 µm	7,9 µm	
Optical resolution	10:1	20:1	15:1	10:1
System accuracy ^{1) 2) 3)}	±2 °C or ±1 %	±3 °C or ±1 %	±1,5 °C or ±1 %	±1,5 °C or ±1 %
Repeatability ^{1) 3)}	±0,5 °C or ±0,5 %	±1,5 °C	±0,5 °C or ±0,5 %	
Temperature coefficient ⁴⁾	±0,05 K/ K or ±0,05 %/ K			
NETD ^{3) 5)}	100 mK	200 mK	140 mK	50 mK
Response time (95 % signal)	120 ms	80 ms	100 ms	150 ms
Warm-up time	10 min			
Emissivity/ Gain	0,100...1,100 (adjustable via programming keys or software)			
Transmissivity	0,100...1,100 (adjustable via programming keys or software)			
Signal processing	Average, peak hold, valley hold (adjustable via programming keys or software)			

¹⁾ at ambient temperature 23 ± 5 °C; whichever is greater; response time=1s

²⁾ Accuracy for thermocouple output: ±2,5°C or ±1%

³⁾ = 1

⁴⁾ for ambient temperatures (head) <18 °C and >28 °C; whichever is greater

⁵⁾ at time constant 200 ms and object temperature=start of measurement range + 50°C



OPEARTING MANUAL



2.7 Optical Charts

The following optical charts show the diameter of the measuring spot in dependence on the distance between measuring object and sensing head. The spot size refers to **90 % of the radiation energy**. The distance is always measured from the front edge of the sensing head

- **The size of the measuring object and the optical resolution of the infrared thermometer determine the maximum distance between sensing head and measuring object.**
- **In order to prevent measuring errors the object should fill out the field of view of the optics completely.**
- **Consequently, the spot should at all times have at least the same size like the object or should be smaller than that.**

D = Distance from front of the sensing head to the object

S = Spot size




OPEARTING MANUAL




251F

Optik: SF
D:S: 25:1

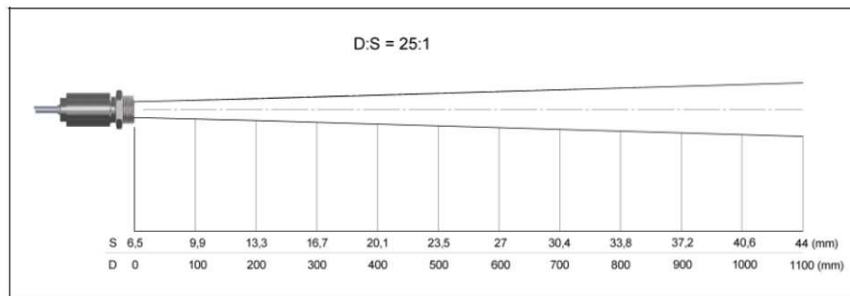

251F

Optik: CF
D:S: 25:1
2,0mm@ 50mm
D:S (Fernfeld) = 6:1

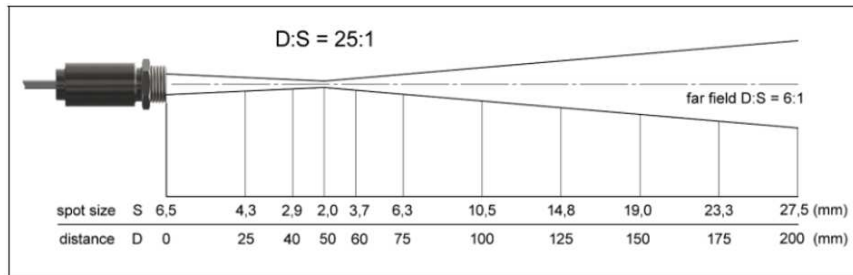


OPERATING MANUAL




201 LT

Optik: SF
D:S: 22:1

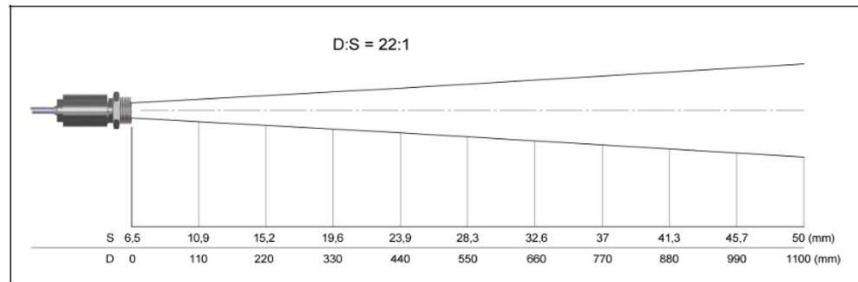

201 LT


Optik: CF
D:S: 22:1
2,3mm@ 50mm
D:S (Fernfeld) = 6:1

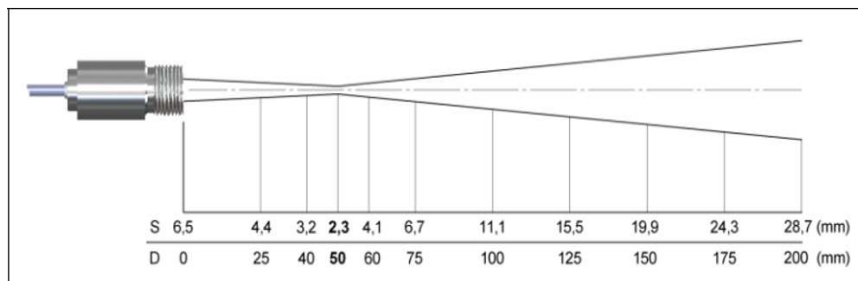


OPEARTING MANUAL

151 LT 151 F

Optik : SF
D:S 15:1

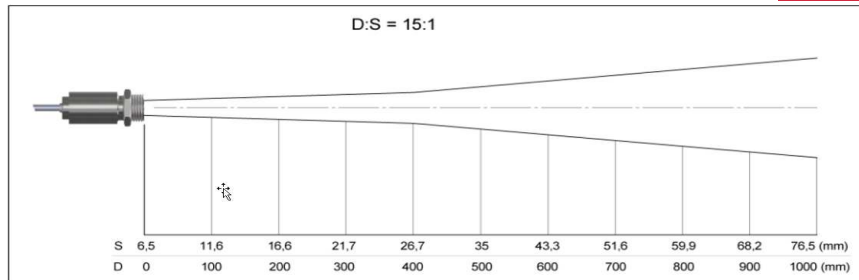

151 LT 151 F
Optik: CF
D:S 15:1
3,4 mm @ 50 mm
D:S Fernfeld : 5:1

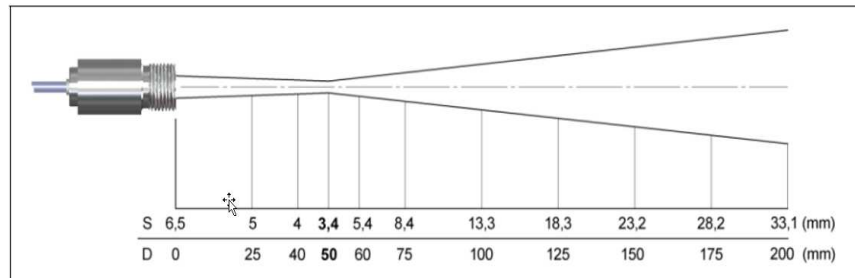


OPERATING MANUAL




101 H 4 ML G5L P7

Optik: SF
D:S 10:1

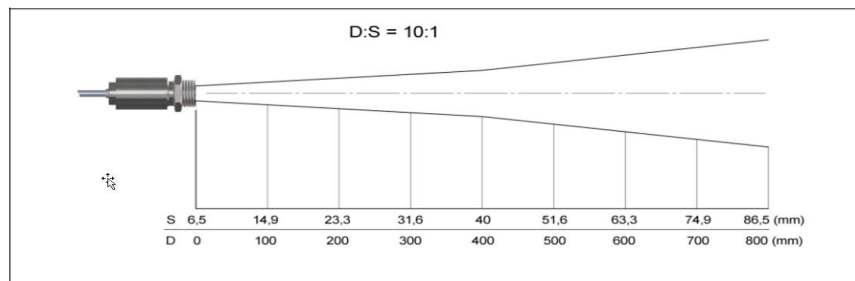

101 H
Optik: CF1
D:S 10:1
3,0 mm @ 30 mm
D:S (Fernfeld) 3:1

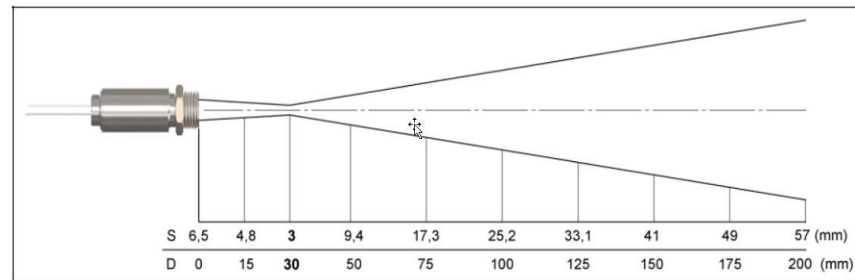


OPERATING MANUAL

4ML


Optik: CF
D:S: 10:1

5,0mm@ 50mm
D:S (Fernfeld) 4:1

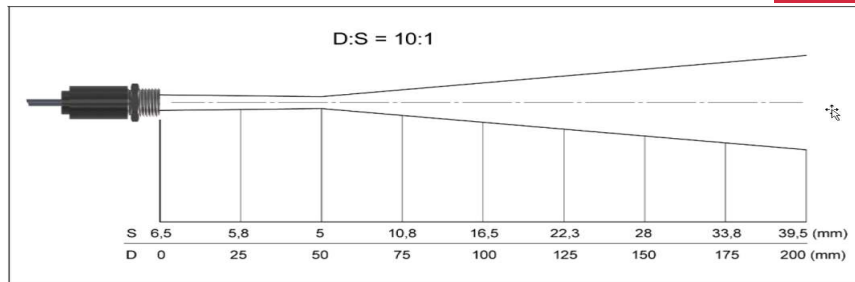

LT02 LT02H


Optik: SF
D:S: 2:1

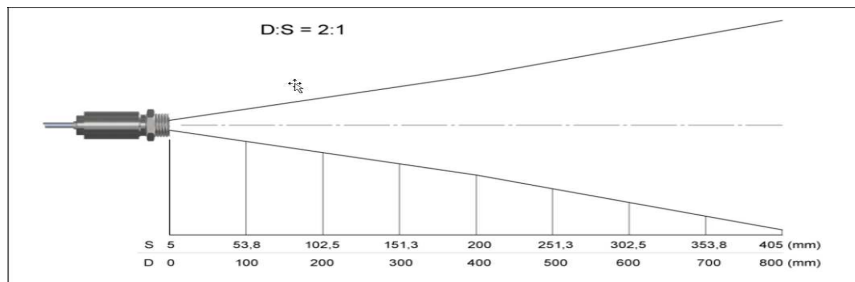

OPEARTING MANUAL


G5H

Optik: SF
D:S: 20:1

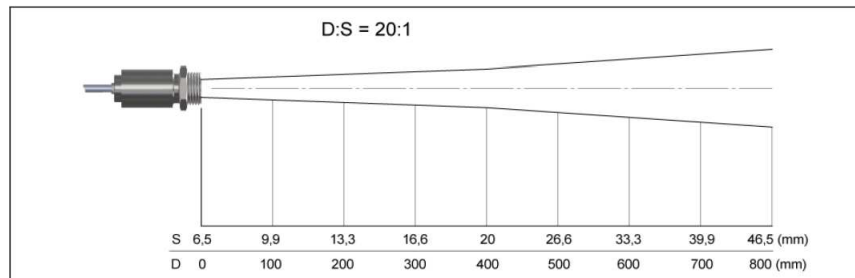

1ML 2ML


Optik: CF
D:S: 40:1
2,7mm@ 110mm
D:S (Fernfeld) 12:1

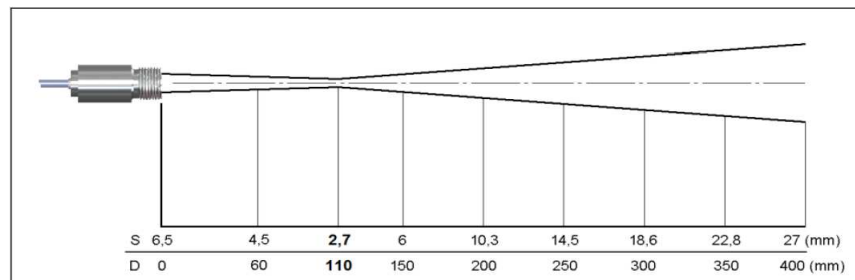

OPERATING MANUAL


1ML 2ML

Optik: SF
D:S: 40:1

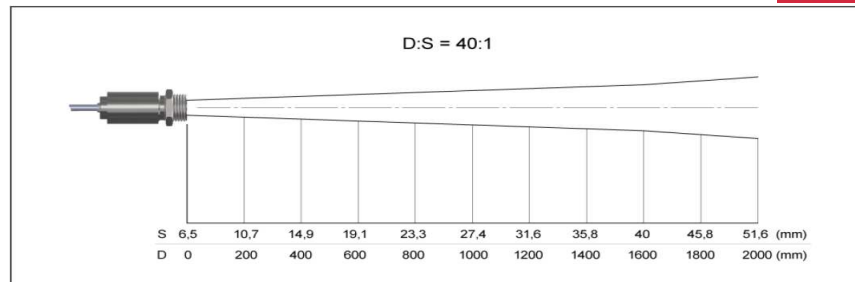

1MH 1MH1 2MH 2MH1
3MH1-H3


Optik: CF
D:S: 75:1
1,5mm@ 110mm
D:S (Fernfeld) 14:1

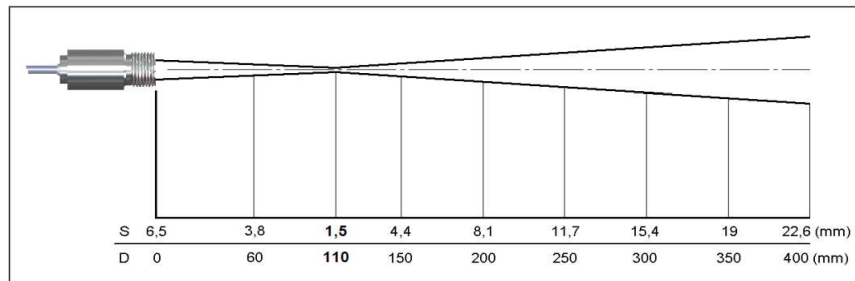

OPEARTING MANUAL


1MH 1MH1 2MH 2MH1
3MH1-H3

Optik: SF
D:S: 75:1

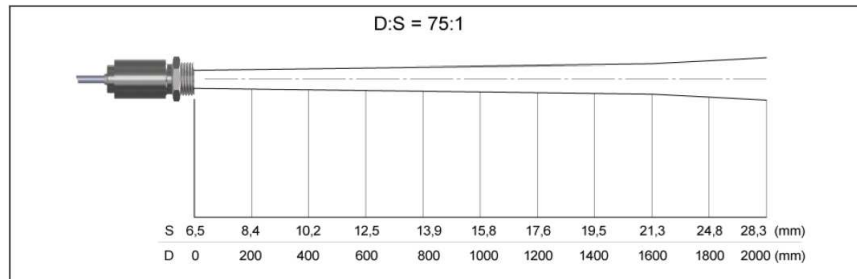

3ML


Optik: SF
D:S: 22:1

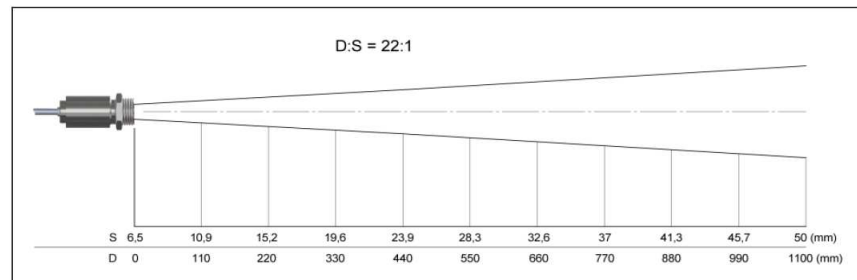

OPEARTING MANUAL


3ML

Optik: CF1
D:S: 22:1
1,5mm@ 30mm
D:S (Fernfeld) 3,5:1

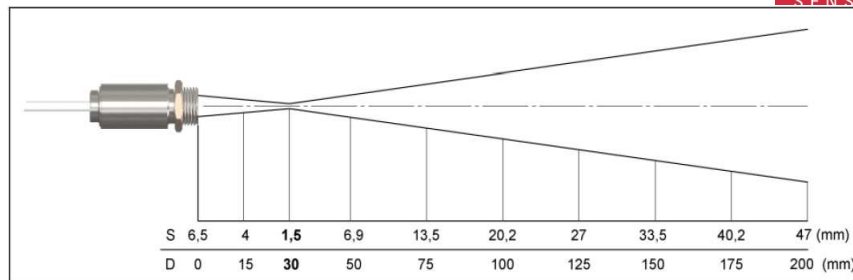

3ML


Optik: CF
D:S: 22:1
5mm@ 110mm
D:S (Fernfeld) 9:1

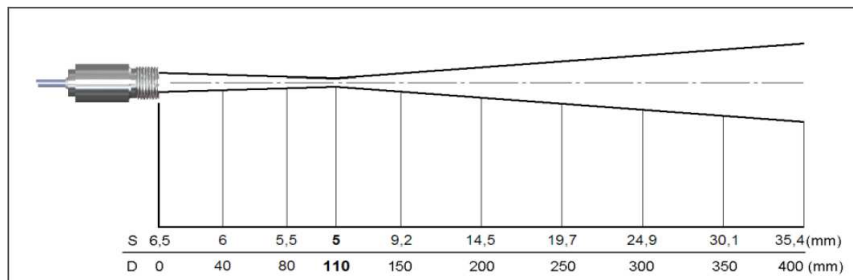

OPEARTING MANUAL


3MH

Optik: SF
D:S: 33:1

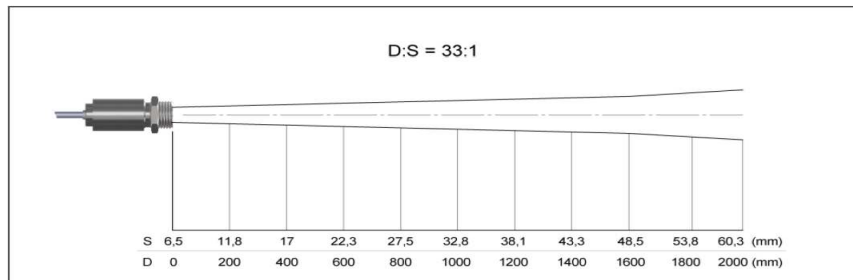

3MH


Optik: CF1
D:S: 33:1
1,0mm@ 30mm
D:S (Fernfeld) 4:1

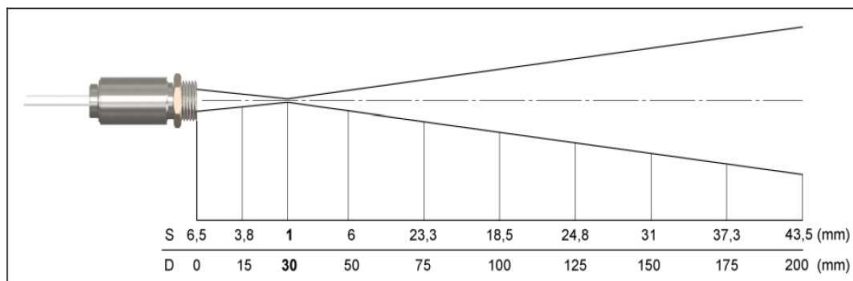

OPERATING MANUAL


3MH

Optik: CF
D:S: 33:1
3,4mm@ 110mm
D:S (Fernfeld) 11:1

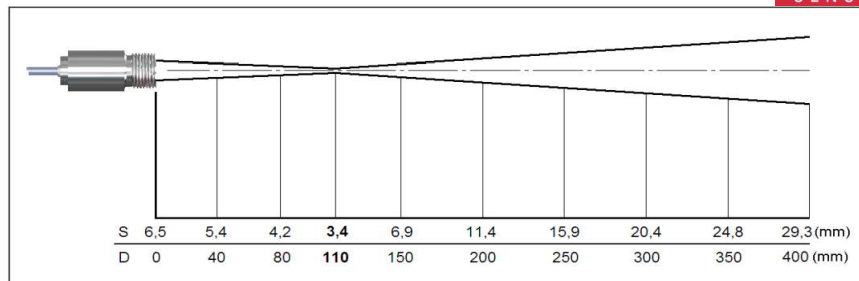

P3

Optik: SF
D:S: 15:1

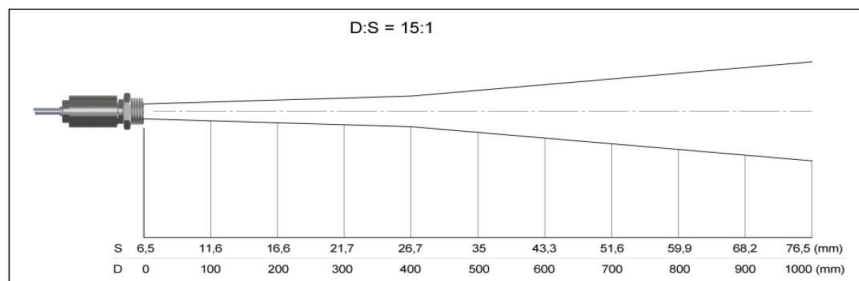

OPEARTING MANUAL



2.8 CF-Lens and Protective window

The optional CF lens allows the measurement of very small objects and can be used in combination with all LT, 1M, 2M, 3M and 4M models. The minimum spot size depends on the used sensing head. The distance is always measured from the front edge of the CF lens holder or laminar air purge collar..

The installation on the sensing head will be done by turning the CF lens until end stop. To combine it with the massive housing please use the version with external thread M12x1.

Transmissionswerte bei Verwendung der CF-Vorsatzoptik (Mittelwerte):

LT	0,78
1M	0,80
2M	0,87
3M	0,92

Versions Overview:

ACCTCF	CF lens for installation on sensing head [LT]
ACCTCFHT	CF lens for installation on sensing head [1M/ 2M/ 3M]
ACCTCFE	CF lens with external thread for installation in massive housing [LT]
ACCTCFHTE	CF lens with external thread for installation in massive housing [1M/ 2M/ 3M]

For protection of the sensing head optics a protective window is available. The mechanical dimensions are equal to the CF lens. It is available in the following versions


ACCTPW	Protective window for installation on sensing head [LT]
ACCTPWHT	Protective window for installation on sensing head [1M/ 2M/ 3M]
ACCTPWE	Protective window with external thread for installation in the massive housing [LT]
ACCTPWHE	Protective window with external thread for installation in the massive housing [1M/ 2M/ 3M]

Transmissionswerte bei Verwendung des Schutzfensters (Mittelwerte):


LT	0,83
1M/ 2M/ 3M	0,93




OPERATING MANUAL

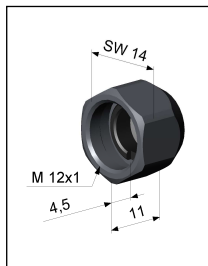

CF-Lens or Protective Window

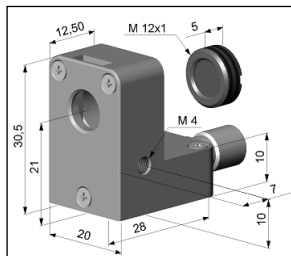

Laminar air purge with integrated CF lens

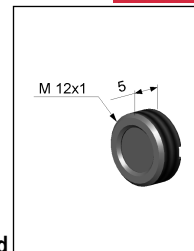


CF lens or Protective window with external thread

251F + CF-Optics

0,5 mm@ 8 mm
0,5 mm@ 6 mm [ACCTAPLCF]

D:S (far field) = 1,6:1

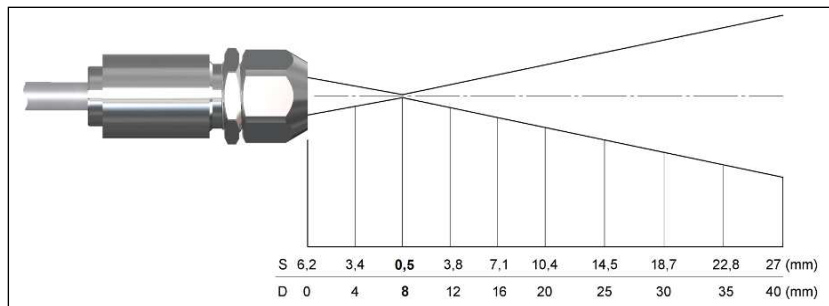


OPEARTING MANUAL




LT201 + CF-Optics

0,6 mm@ 10 mm
 0,6 mm@ 8 mm [ACCTAPLCF]
 D:S (Far field) = 1,5:1

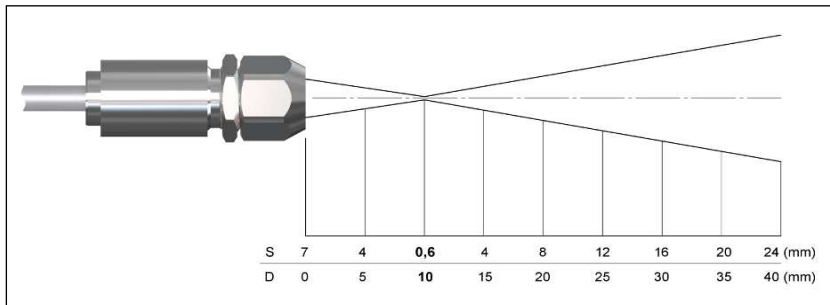

LT151/ 151F + CF-Optics

0,8 mm@ 10 mm
 0,8 mm@ 8 mm [ACCTAPLCF]
 D:S (far field) = 1,2:1

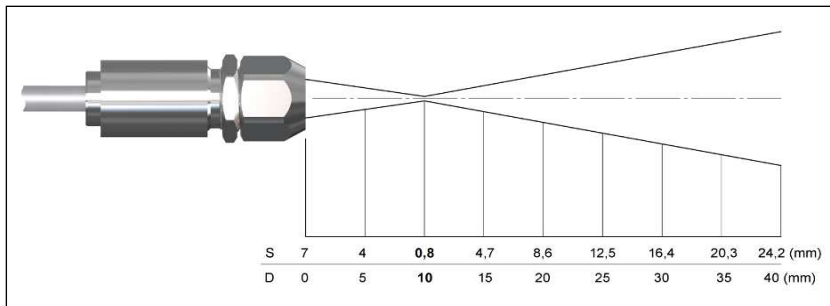


OPEARTING MANUAL

101H + CF-Optics

1,2 mm@ 10 mm
1,2 mm@ 8 mm [ACCTAPLCF]


D:S (far field) = 1,2:1

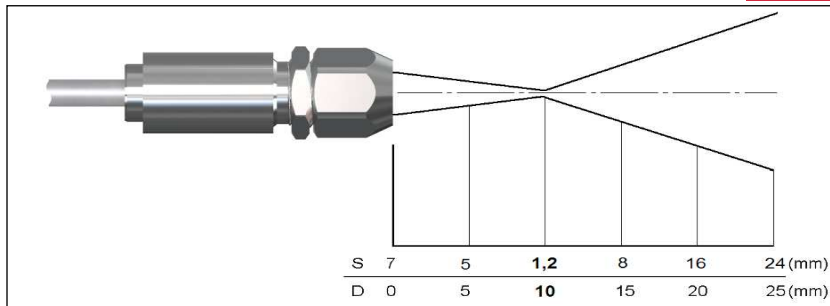

LT21/ 21H + CF-Optics

2,5 mm@ 23 mm
2,5 mm@ 21 mm [ACCTAPLCF]

D:S (far field) = 5:1

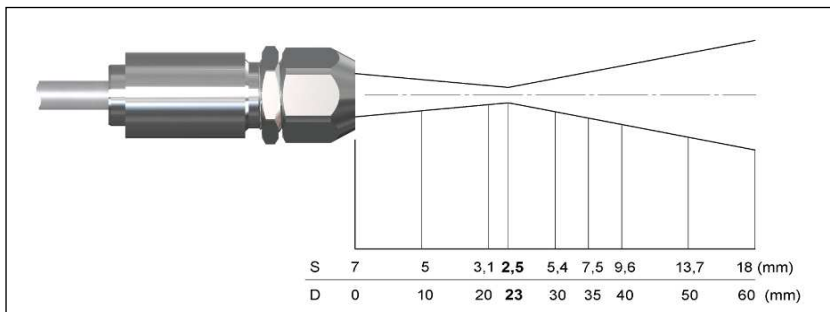


OPERATING MANUAL


3 Mechanical Installation

The DM sensing heads are equipped with a metrical M12x1-thread and can be installed either directly via the sensor thread or with help of the hex nut (included in scope of supply) to the mounting bracket available. Various mounting brackets, which make the adjustment of the sensing head easier, can be additionally ordered as accessories.

All accessories can be ordered using the according part numbers in brackets [.

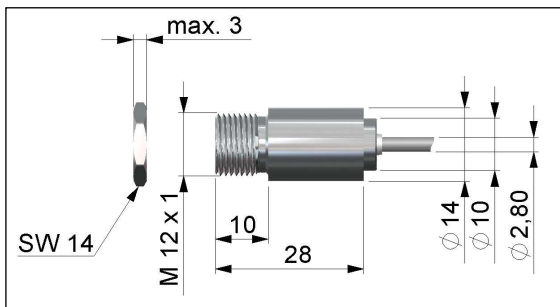


Sensing Head

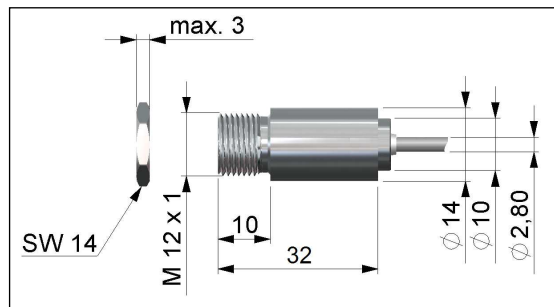

Sensing Head LT151-CF/ LT201-CF

OPERATING MANUAL

The LT hot- and P3/P7-sensors will be delivered with the massive housing and can be installed via the M18x1-thread.


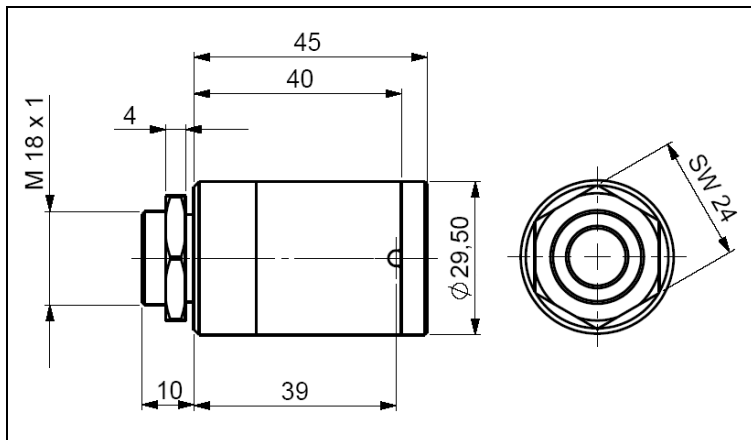


Massive housing (Standard on LT hot, P3 and P7)

Make sure to keep the optical path clear of any obstacles.




OPERATING MANUAL

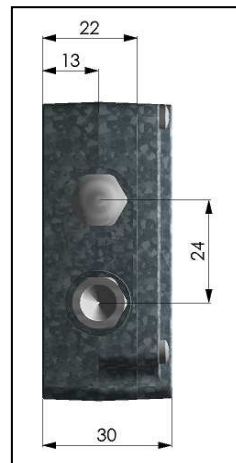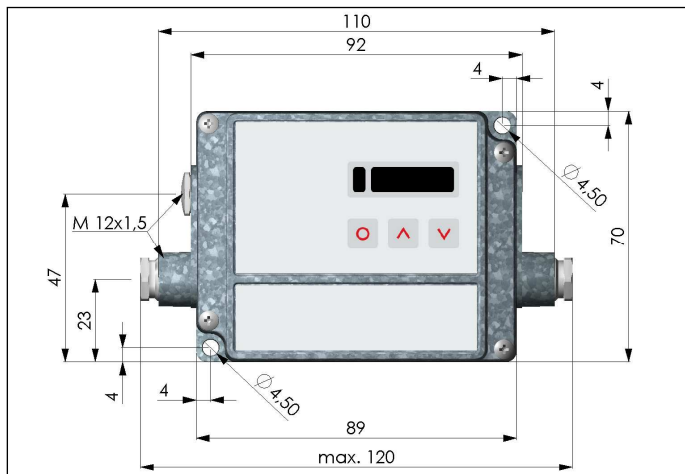

Electronic box

The electronic box is also available with closed cover (display and programming keys with no access from outside) [ACCTCOV].

On the DM models LT21, LT21H and LT101H the head cable must not be moved during the measurement

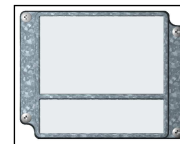


BIB
SENSORS




OPERATING MANUAL


3.1 Mounting Accessories

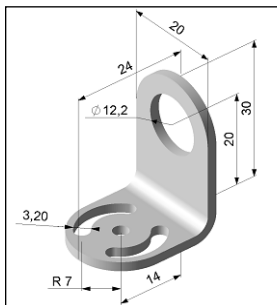

Mounting bracket, adjustable in one axis [ACCTFB]

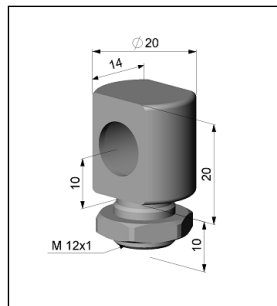

Mounting bolt with M12x1 thread, adjustable in one axis [ACCTMB]

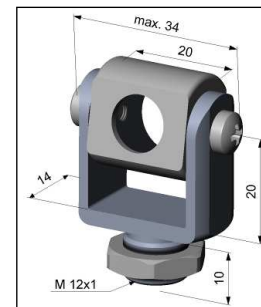

Mounting fork with M12x1 thread, adjustable in 2 axes [ACCTMG]



Mounting bracket, adjustable in two axes [ACCTAB] consisting of: ACCTFB and ACCTMB


The Mounting fork can be combined with the Mounting bracket [ACCTFB] using the M12x1 thread.




OPEARTING MANUAL

3.2 Air Purge Collars

The lens must be always kept clean from dust, smoke, fumes, and other contaminants in order to avoid reading errors. These effects can be reduced by using an air purge collar. Make sure to use oil-free, technically clean air, only.

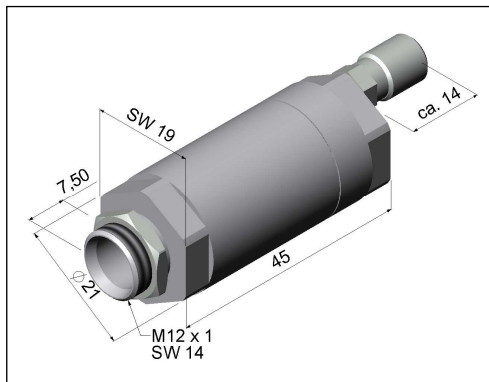


Standard air purge collar [ACCTAP] for optics with a D:S $\geq$ 10:1 (not for sensing heads with 32 mm length), fits to the mounting bracket Hose connection: 3x5 mm. Thread (fitting): M5

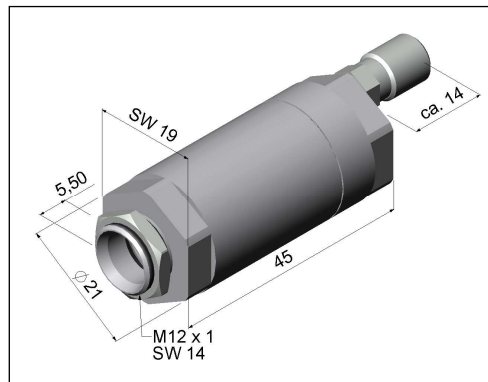

Standard air purge collar [ACCTAP2] for optics with a D:S $\leq$ 2:1 (not for sensing heads with 32 mm length), fits to the mounting bracket Hose connection: 3x5 mm. Thread (fitting): M5

The needed amount of air (approx. 2...10 l/ min.) depends on the application and the installation conditions on-site

OPERATING MANUAL

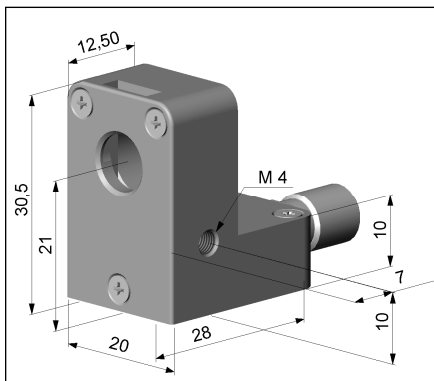

Laminar air purge collar [ACCTAPL]
The sideward air outlet prevents a cooling down of the object in short distances.

Hose connection: 3x5 mm
Thread (fitting): M5




Laminar air purge collar with
mounting fork [ACCTAPLMF],
adjustable in 2 axes

The needed amount of air (approx. 2...10 l/ min.) depends on the application and the installation conditions on-site.



OPEARTING MANUAL

3.3 Further Accessories

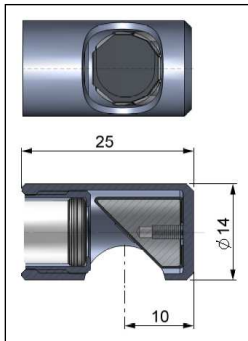

Right Angle Mirror [ACCTRAM]]

for optics with a D:S $\geq 10:1$; enables measurements with 90° angle to sensor axis.

The mirror has a reflexion of 96% in combination with a DM201 and 151 head and 88% with a 151F head. If the mirror is used this value has to be multiplied by the emissivity value of the measurement object.

Example: DM201 and object with emissivity = 0,85
 $0,85 \times 0,96 = 0,816$

Thus the emissivity in the DM has to be set to the resulting value of 0,816.



Laser-Sighting tool [D08ACCTLST]

battery powered (2x Alcaline AA), for alignment of DM sensing heads. The laser head has the same mechanical dimensions as the DM sensing head

WARNING: Do not point the laser directly at the eyes of persons or animals! Do not stare into the laser beam. Avoid indirect exposure via reflective surfaces!




OPERATING MANUAL


OEM-Laser-Sightingtool

The OEM-Laser-Sighting tool is available with 3,5 m [ACCTOEMLST] and 8 m connection cable [ACCTOEMLSTCB8]. The laser can be connected to the pins **3V SW** or **PINK** (only for 4M Model) and **GND** ► **4 Electrical Installation** and switched on and off via the programming keys or via the software.

The special double-hole mounting bracket [ACCTFB2] allows a simultaneous mounting of the DM sensing head and the laser head..

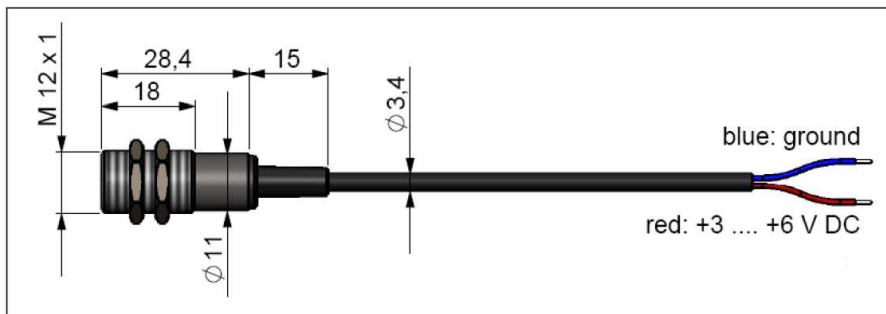


OEM-Laser-Sighting tool [ACCTOEMLST or ACCTOEMLSTCB8]

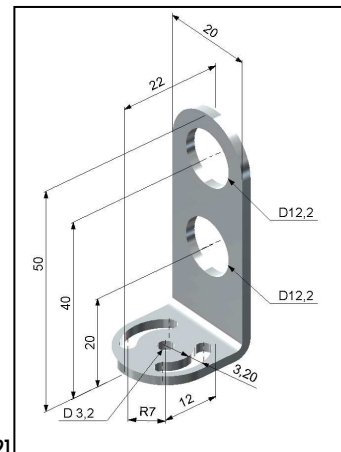


Mounting bracket [ACCTFB2]

OPERATING MANUAL

Massive Housing

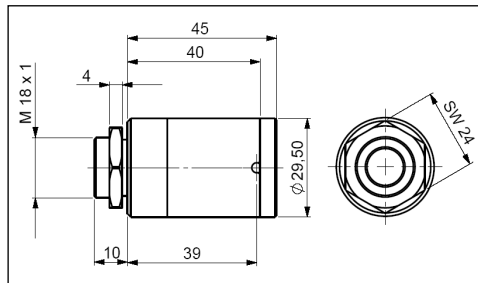

Massive housing, stainless steel [D06ACCTMHS] – also available in aluminum (anodized) or brass

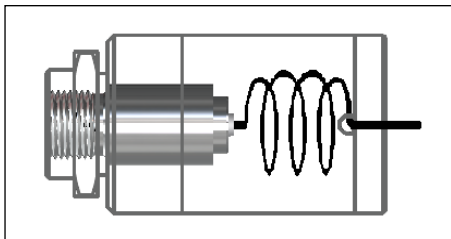


The Massive housing allows reproducible and stable measurements on applications with significant and short-term variation in ambient temperatures. It can be combined with the CF lens [ACCTCFE] or with the protective window [ACCTPWE].

IMPORTANT: For an optimum function of the massive housing 10 cm of the head cable must be installed in loops inside the housing.




OPERATING MANUAL

Accessories for Massive Housing

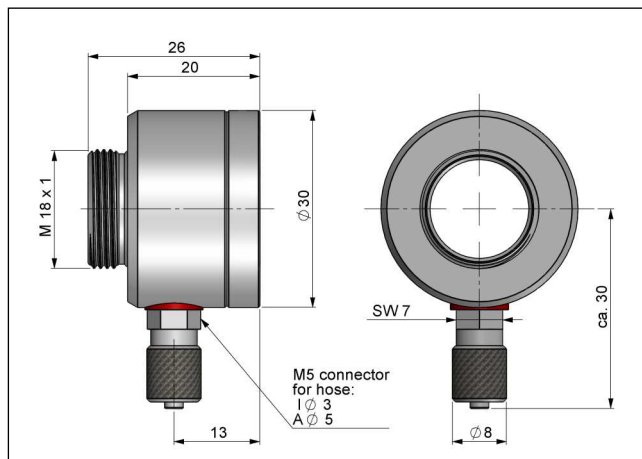

Air purge collar for massive housing (thread M18x1) [ACCTAPMH]

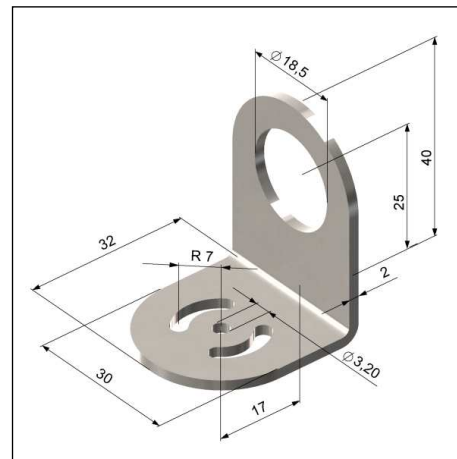

Mounting bracket for massive housing, adjustable in one axis [ACCTFBMH]

The needed amount of air (approx. 2...10 l/ min.) depends on the application and the installation conditions on-site.


OPERATING MANUAL

Pipe Adapter and Sighting Tubes


The pipe adapter [ACCTPA] allows an assembling of sighting tubes directly on the DM head. The sighting tubes are available in 3 different lengths:

ACCTST20	20 mm
ACCTST40	40 mm
ACCTST88	88 mm

The sighting tubes can only be used for sensing heads with a distance-to-spot ratio (D:S) of $\geq 15:1$.

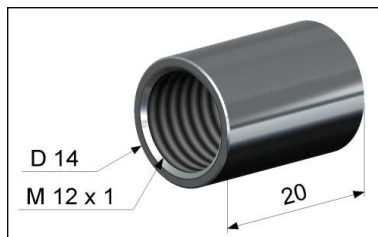


Rohradapter [ACCTPA]

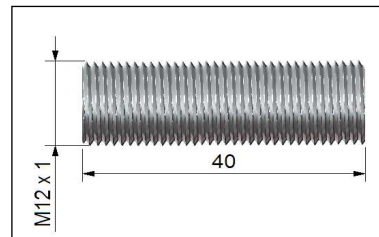


Reflexionsschutzrohr [ACCTST40]

Rail Mount Adapter for Electronic box

With the rail mount adapter the DM electronics can be mounted easily on a DIN rail (TS35) according EN50022.

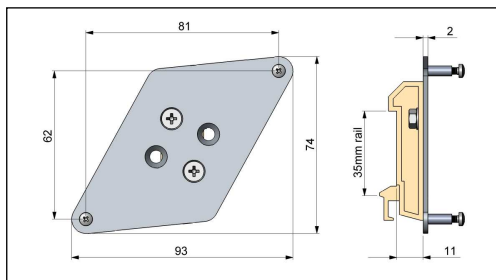

Rail Mount Adapter [ACCTRAIL]

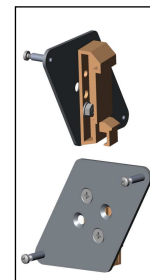



OPEARTING MANUAL



Tilt Assembly for DM heads

With this mounting accessory a fine adjustment of the DM head with an off-axis angle $\pm 6,5^\circ$ is possible..

Tilt assembly [ACCTTAS]

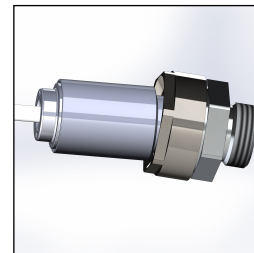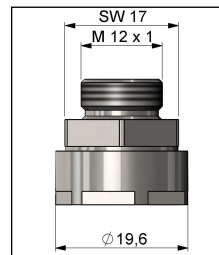

OPEARTING MANUAL


4 Electrical Installation

4.1 Cable Connections

For the electrical installation of the DM please open at first the cover of the electronic box (4 screws). Below the display are the screw terminals for the cable connection.

4.1.1 Designation [models LT/ G5/ P3/ P7]

+8...36 VDC	Power supply
GND	Ground (0 V) of power supply
GND	Ground (0 V) of internal in- and outputs
OUT-AMB	Analog output head temperature (mV)
OUT-TC	Analog output thermocouple (J or K)
OUT-mV/mA	Analog output object temperature (mV or mA)
F1-F3	Functional inputs
AL2	Alarm 2 (Open collector output)
3V SW	3 VDC, switchable, for laser-sightingtool
GND	Ground (0 V) for laser-sightingtool
BROWN	Temperature probe head
WHITE	Temperature probe head
GREEN	Detector signal (-)
YELLOW	Detector signal (+)

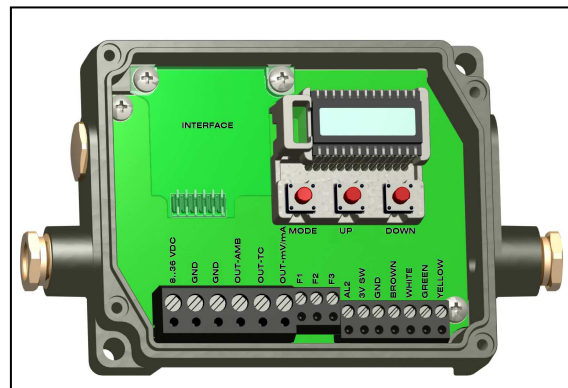


Opened LT/ G5/ P3/ P7 electronic box with terminal connections



OPEARTING MANUAL

4.1.2 Designations [Models 1M/ 2M/ 3M]

+8..36VDC	Power supply
GND	Ground (0 V) of power supply
GND	Ground (0 V) of internal in- and outputs
AL2	Alarm 2 (Open-collector Output)
OUT-TC	Analog output thermocouple (J or K)
OUT-mV/mA	Analog output object temperature (mV or mA)
F1-F3	Functional inputs
GND	Masse (0V)
3V SW	3 VDC, switchable, for laser-sightingtool
GND	Ground (0 V) for laser-sightingtool
BROWN	Temperature probe head (NTC)
WHITE	Head ground
GREEN	Head power
YELLOW	Detector signal

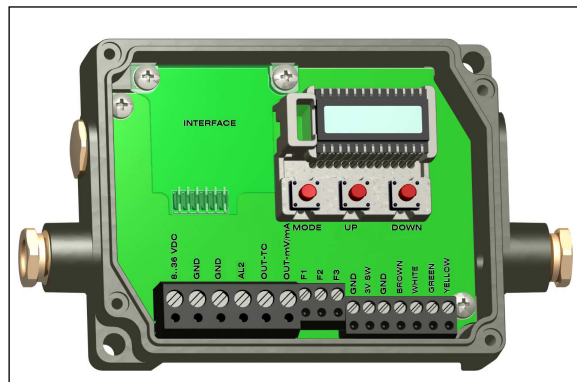


Opened 1M/ 2M/ 3M electronic box with terminal connections

OPEARTING MANUAL

4.1.3 Designations [Models 4M]

+8..36VDC	Power supply
GND	Ground (0 V) of power supply
GND	Ground (0 V) of internal in- and outputs
AL2	Alarm 2 (Open-collector Output)
OUT-1	Analog output mA, mV, TCK
OUT-2	Analog output mA, mV, TCK
IO1-IO3	In- and outputs
GND	Ground (0 V)
Pink	3 VDC, switchable, for laser-sighting tool
Gray	Ground of PIN pink
BROWN	Temperature probe head (NTC)
WHITE	Head ground
GREEN	Head power
YELLOW	Detector signal

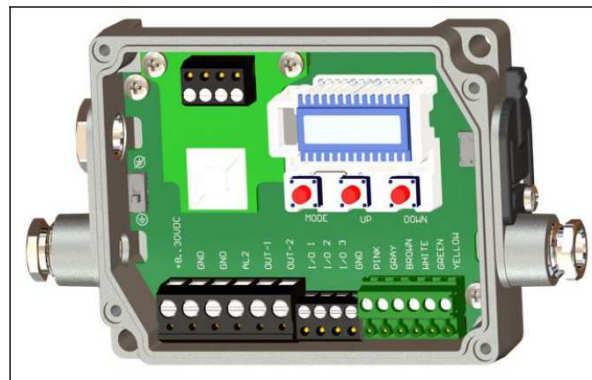

Opened 4M electronic box with terminal connections



OPERATING MANUAL



The supplied USB cable can be connected to the side of the electronics box. The device can be operated directly via the CompactPlus Connect software

The USB socket on the side is only intended for setup and service and not for continuous use

4.1.4 Power Supply

Please use a stabilized power supply unit with an output voltage in the range of **8–36 VDC (4M: 8-30 VDC)** which can supply **100 mA**. The ripple should be max. **200 mV**.

Please do never connect a supply voltage to the analog outputs as this will destroy the output!
The CT is not a 2-wire sensor!




OPERATING MANUAL

4.1.5 Cable Assembling

The cable gland M12x1,5 allows the use of cables with a diameter of 3 to 5 mm. Remove the isolation from the cable (40 mm power supply, 50 mm signal outputs, 60 mm functional inputs). Cut the shield down to approximately 5 mm and spread the strands out. Extract about 4 mm of the wire isolation and tin the wire ends.

Place the pressing screw, the rubber washer and the metal washers of the cable gland one after the other onto the prepared cable end. Spread the strands and fix the shield between two of the metal washers. Insert the cable into the cable gland until the limit stop. Screw the cap tight.

Every single wire may be connected to the according screw clamps according to their colors

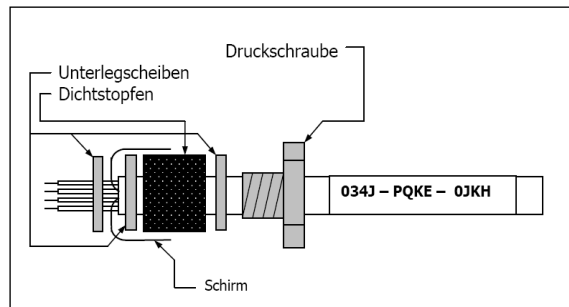

Use shielded cables only. The sensor shield has to be grounded.



OPEARTING MANUAL


4.2 Ground Connections

4.2.1 1M, 2M, 3M Models

At the bottom side of the mainboard PCB, you will find a connector (jumper) which has been placed from factory side as shown in the picture [bottom and middle pin connected]. In this position the ground connections (GND power supply/ outputs) are connected with the ground of the electronics housing.

To avoid ground loops and related signal interferences in industrial environments it might be necessary to interrupt this connection. To do this put the jumper in the opposite position [middle and top pin connected].

If the thermocouple output is used the connection GND – housing should be interrupted generally.

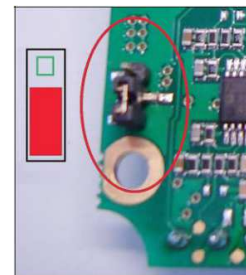

4.2.2 4M Model

On the left side of the mainboard PCB, you will find a black switch which is connecting factory-default the ground connections (GND power supply/ outputs) with the ground of the electronics housing.

To avoid ground loops and related signal interferences in industrial environments it might be necessary to interrupt this connection. For this purpose, the switch must be changed



OPEARTING MANUAL




4.2.3 LT, LTF, LTH, G5, P3, P7 Models

At the bottom side of the mainboard PCB, you will find a connector (jumper) which has been placed from factory side as shown in the picture [left and middle pin connected]. In this position the ground connections (GND power supply/ outputs) are connected with the ground of the electronics housing.

To avoid ground loops and related signal interferences in industrial environments it might be necessary to interrupt this connection. To do this please put the jumper in the other position [middle and right pin connected].

If the thermocouple output is used the connection GND – housing should be interrupted generally

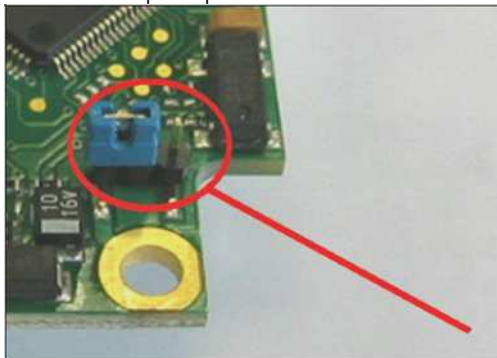

OPEARTING MANUAL



4.3 Exchange of the Sensing Head

From factory side the sensing head has already been connected to the electronics and the calibration code has been entered. Inside a certain model group any exchange of sensing heads and electronics is possible. The sensing heads and electronics of the **DM Fast** models (**LT151F** and **LT251F**) and **DM 4M** cannot be exchanged.


Bei Montage eines neuen Messkopfes muss der Kalibriercode des neuen Kopfes in die Elektronik eingegeben werden.

4.3.1 Entering of the Calibration Code

Every head has a specific calibration code, which is printed on the head cable. For a correct temperature measurement and functionality of the sensor this calibration code must be stored into the electronic box. The calibration code consists of 3 blocks (1M, 2M, 3M = 5 blocks) with 4 characters each.

Example :

A6FG	–	22KB	–	0AS0
1.Block		2.Block		3.Block

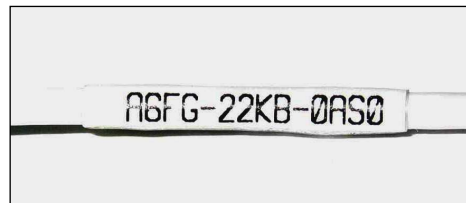

For entering the code please press the Up and Down key (keep pressed) and then the Mode key. The display shows HCODE and then the 4 signs of the first block. With Up and Down each sign can be changed; Mode switches to the next sign or next block.

The entering of a new calibration code can also be made via the CompactConnect software (optional)..



OPERATING MANUAL



You will find the calibration code on a label fixed on the head cable (near the electronics). Please do not remove this label or make sure the code is noted anywhere. The code is needed if the electronics must be exchanged or in case of a necessary recalibration of the sensor.

After you have modified the head code a reset is necessary to activate the change. ► 6 Operating]

4.3.2 Sensing Head Cable

On all DM models (**exception 3M, P3, P7**) the sensing head cable can be shortened if necessary.

On the models **1M, 2M** and **DM Fast** the sensing head cable can be shortened by max. 3 m.

A shortening of the cable will cause an additional measuring error of about **0,1 K/ m**.

The **3M** models are only available with 3 m cable.

On the DM models LT21, LT21H and LT101H the head cable must not be moved during the measurement



OPERATING MANUAL



5 Outputs and Inputs

5.1 Analog Outputs

The CT has two analog output channels. With the 4M Model the outputs are freely selectable

ACHTUNG: An die Analogausgänge darf auf keinen Fall eine Spannung angelegt werden, da dies zur Zerstörung des Ausgangs führt. Der DM ist kein Zweileitersensor!

5.1.1 Output channel 1

This output is used for the object temperature. The selection of the output signal can be done via the programming keys [► 6 Operating]. The software allows the programming of output channel 1 as an alarm output.

Output signal	Range	Connection pin on CT board
Voltage	0 ... 5 V	OUT-mV/mA
Voltage	0 ... 10 V	OUT-mV/mA
Current	0 ... 20 mA	OUT-mV/mA
Current	4 ... 20 mA	OUT-mV/mA
Thermocouple	TC J	OUT-TC
Thermocouple	TC K	OUT-TC

According to the chosen output signal different connection pins on the mainboard are used (OUT-mV/mA or OUT-TC).

5.1.2 Output channel 2 [LT/ G5/ P3/ P7 only]

The connection pin OUT-AMB is used for output of the head temperature [-20-180 °C or -20-250 °C (on LT21H and LT101H) as 0-5 V or 0-10 V signal]. The software allows the programming of output channel 2 as an alarm output. Instead of the head temperature T_{Head} also the object temperature T_{Obj} or electronic box temperature T_{Box} can be selected as alarm source.




OPEARTING MANUAL

5.2 Digital Interfaces

The DM sensors can be optionally equipped with an USB-, RS232-, RS485-, Profibus DP-*, Modbus RTU-* or Ethernet-interface. If you want to install an interface, plug the interface board into the place provided, which is located beside the display. In the correct position the holes of the interface match with the thread holes of the electronic box. Now press the board down to connect it and use both M3x5 screws for fixing it. Plug the preassembled interface cable with the terminal block into the male connector of the interface board.

** Not available for 4M*

The Ethernet interface requires at minimum 12 V supply voltage.
Please pay attention to the notes on the according interface manuals.

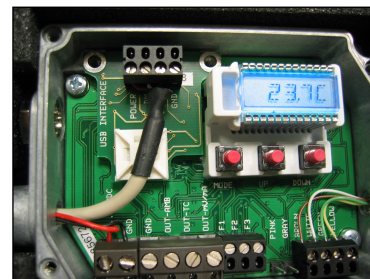

5.3 Relay Outputs

The DM can be optionally equipped with a relay output PCB. The relay board will be installed the same way as the digital interfaces. **A simultaneous installation of a digital interface and the relay outputs is not possible.** The relay board provides **two** fully isolated switches, which have the capability to switch max. 60 VDC/ 42 VACRMS, 0,4 A DC/AC. A red LED shows the closed switch.

OPERATING MANUAL



The switching thresholds are in accordance with the values for alarm 1 and 2 [► 5.6 Alarms]. The alarm values are set according to the ► 1.6 Factory Default Settings.
To make advanced settings (change of low- and high alarm) a digital interface (USB, RS232) and the software is needed

5.4 Functional Inputs (not for 4M Models)

The three functional inputs F1 – F3 can be programmed with the software only

- F1 (digital):** trigger (a 0 V level on F1 resets the hold functions)
F2 (analog): external emissivity adjustment [0–10 V: 0 V ► $\epsilon = 0,1$; 9 V ► $\epsilon = 1$; 10 V ► $\epsilon = 1,1$]
F3 (analog): external compensation of ambient temperature/ the range is scalable via software.
[0–10 V ► -40–900 °C / preset range: -20–200 °C]
F1-F3 (digital): emissivity (digital choice via table)

A non-connected input represents:

F1 = High | F2, F3 = Low.

[High level: $\geq +3 \text{ V} \dots +36 \text{ V}$ | Low level: $\leq +0,4 \text{ V} \dots -36 \text{ V}$]



OPEARTING MANUAL



5.5 I/O pins (only for 4M Models)

The 4M has three digital pins which can be programmed as outputs (digital) or as inputs (digital or analog) using the CompactPlus Connect software. The following functions are available::

Funktion	I/O Pin ist ein	Beschreibung
Alarm	Output digital	Open collector output/ definition as High- or Low alarm via norm. open/ norm. close options in software dialog.
Valid Low	Input digital	The output follows the object temperature as long as there is a Low level at the I/O pin. After discontinuation of the Low level the last value will be held.
Valid High	Input digital	The output follows the object temperature as long as there is a High level at the I/O pin. After discontinuation of the High level the last value will be held.
Hold Low-High	Input digital	The last value will be held if there is a signal with a rising edge on the I/O pin.
Hold High-Low	Input digital	The last value will be held if there is a signal with a falling edge on the I/O pin.
Hold Reset Low	Input digital	Reset of Peak or valley hold (High-Low signal)
Hold Reset High	Input digital	Reset of Peak or valley hold (Low-High signal)
Emissivity external	Input analog	The emissivity value can be adjusted via a 0-10 V signal on the I/O pin (scaling possible via software).
Uncommitted value	Input analog	Display of a uncommitted value
Laser on Low	Input digital	Turning on the laser (Low signal)
Laser on High	Input digital	Turning on the laser (High signal)
External Ambient Compensation	Input analog	The ambient temperature will be determined by a voltage on the I/O-pin [0–10 V; range scalable].
External Transmitted Radiation	Input analog	The transmitted ambient temperature will be determined by a voltage on the I/O-pin [0–10 V; range scalable].



OPERATING MANUAL



5.6 Alarms

The DM has the following Alarm features:

All alarms (alarm 1, alarm 2, output channel 1 and 2 if used as alarm output) have a fixed **hysteresis of 2 K (DM hot: 1 K)**.

5.6.1 Output channel 1 and 2 [channel 2 on LT/ G5/ P3/ P7 only]

To activate the according output channel has to be switched into digital mode. For this purpose the software CompactConnect/ CompactPlus Connect is required.

On the CT model 4M both outputs are freely selectable. Analog mA/mV, Alarm mA/mV and TCK are available

Visual Alarms

These alarms will cause a change of the color of the LCD display and will also change the status of the optional relays interface. In addition the Alarm 2 can be used as open collector output at pin AL2 on the mainboard [**24 V/ 50 mA**].

From factory side the alarms are defined as follows:

Alarm 1 **Norm. closed/ Low-Alarm**

Alarm 2 **Norm. open/ High-Alarm**

For extended setup like definition as low or high alarm [**via change of normally open/ closed**], selection of the signal source [**T_{Proc}, T_{Head}, T_{Box}**] a digital interface (e.g. USB, RS232) including the software CompactConnect is needed.

Both of these alarms will have effect on the LCD color

BLU: **Alarm 1 active**

RED: **Alarm 2 active**



GREEN: **NO Alarm active**

On the model 4M visual alarms are independent of the alarm settings. In the CompactPlus Connect software these can be defined as desired



OPEARTING MANUAL

5.6.2 Open collector output / AL2

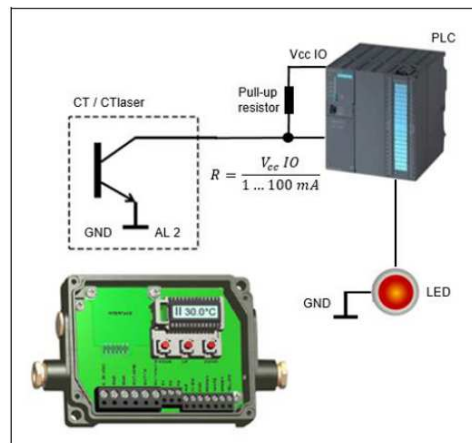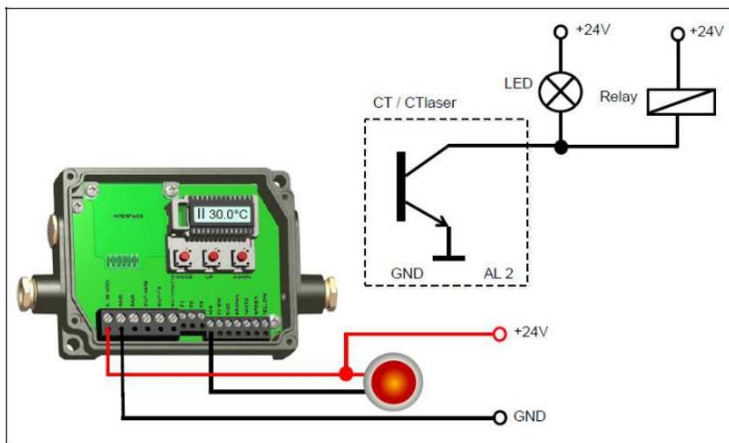

- The transistor acts as a switch. In case of alarm, the contact is closed.
- A load/consumer (Relay, LED or a resistor) must always be connected.
- The alarm voltage (here 24 V) must not be connected directly to the alarm output (short circuit).

OPEARTING MANUAL




6 Operating

After power up the unit the sensor starts an initializing routine for some seconds. During this time the display will show **INIT**. After this procedure the object temperature is shown in the display. The display backlight color changes according to the alarm settings ► **5.6 Alarms**].

6.1 Sensor Setup

The programming keys **Mode**, **Up** and **Down** enable the user to set the sensor on-site. The current measuring value or the chosen feature is displayed. With **Mode** the operator obtains the chosen feature, with **Up** and **Down** the functional parameters can be selected – **a change of parameters will have immediate effect**. If no key is pressed for more than 10 seconds the display automatically shows the calculated object temperature (according to the signal processing)

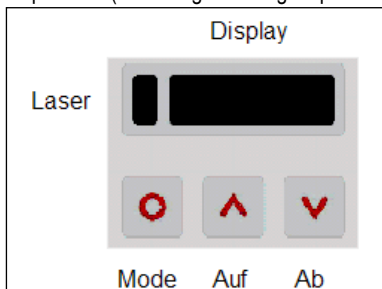

Pressing the Mode button again recalls the last called function on the display. The signal processing features **Peak hold** and **Valley hold** cannot be selected simultaneously

Factory Default Setting

To set the DM back to the factory default settings, please press at first the **Down**-key and then the **Mode**-key and keep both pressed for approx. 3 seconds. The display will show **RESET** for confirmation

OPEARTING MANUAL



Display	Mode [Sample]	Adjustment Range
142.3C	Object temperature (after signal processing) [142,3 °C]	fixed
127CH	Head temperature [127 °C]	fixed
25CB	Box temperature [25 °C]	fixed
142CA	Current object temperature [142 °C]	fixed
MV 5	Signal output channel 1 [0-5 V]	0-20 = 0–20 mA/ 4-20 = 4–20 mA/ MV5 = 0–5 V/ MV10 = 0-10 V/ TCJ = thermocouple type J/ TCK = thermocouple type K
E0.970	Emissivity [0,970]	0,100 ... 1,100
T1.000	Transmissivity [1,000]	0,100 ... 1,100
A0.2	Signal output Average [0,2 s]	A---- = inactiv/ 0,1 ... 999,9 s
P----	Signal output Peak hold [inactive]	P---- = inactiv/ 0,1 ... 999,9 s/ P oo oo oo oo = infinite
V----	Signal output Valley hold [inactive]	V---- = inactiv/ 0,1 ... 999,9 s/ V oo oo oo oo = infinite
u0.0	Lower limit temperature range [0 °C]	depending on model/ inactive at TCJ- and TCK-output
n 500.0	Upper limit temperature range [500 °C]	depending on model/ inactive at TCJ- and TCK-output
[0.00	Lower limit signal output [0 V]	according to the range of the selected output signal
] 5.00	Upper limit signal output [5 V]	according to the range of the selected output signal
U °C	Temperature unit [°C]	°C/ °F
30.0	Lower alarm limit [30 °C]	depending on model
100.0	Upper alarm limit [100 °C] AL2	depending on model
XHEAD	Ambient temperature compensation [head temperature]	XHEAD = head temperature/ -40,0 ... 900,0 °C (for LT) as fixed value for compensation/ returning to XHEAD (head temperature) by pressing Up and Down together
M 01	Multidrop adress [1] (only with RS485 interface) RS422 mode	01...32 RS422 (Press Down button on M01)
B 9.6	Baud rate in kBaud [9,6]	9,6/ 19,2/ 38,4/ 57,6/ 115,2 kBaud
S ON	Laser Sighting (3 VDC switch to connection pin 3V SW)SW)	ON/ OFF This menu item appears on first position on 1M/ 2M/ 3M models.



OPERATING MANUAL




MV5	Selection of the Output signal . By pressing Up or Down the different output signals can be selected (see table).
E0.970	Setup of Emissivity. Pressing Up increases the value, Down decreases the value (also valid for all further functions). The emissivity is a material constant factor to describe the ability of the body to emit infrared energy ► 10 Emissivity].
T1.000	Setup of Transmissivity. This function is used if an optical component (protective window, additional optics e.g.) is mounted between sensor and object. The standard setting is 1.000 = 100 % (if no protective window etc. is used).
A 0.2	Setup of Average time . In this mode an arithmetic algorithm will be performed to smoothen the signal. The set time is the time constant. This function can be combined with all other post processing functions. On 1M/ 2M/ 3M models the shortest value is 0,001 s (other models: 0,1 s) and can be increased/ decreased only by values of the power series of 2 (0,002, 0,004, 0,008, 0,016, 0,032, ...). If the value is set to 0.0 the display will show --- (function deactivated).
P----	Setup of Peak hold . In this mode the sensor is waiting for descending signals. If the signal descends the algorithm maintains the previous signal peak for the specified time. After the hold time the signal will drop down to the second highest value or will descend by 1/8 of the difference between the previous peak and the minimum value during the hold time. This value will be held again for the specified time. After this the signal will drop down with slow time constant and will follow the current object temperature. If the value is set to 0.0 the display will show --- (function deactivated).
V----	Setup of Valley hold . In this mode the sensor waits for ascending signals. The definition of the algorithm is according to the peak hold algorithm (inverted). If the value is set to 0.0 the display will show --- (function deactivated).



OPEARTING MANUAL

Signal graph with **P----**

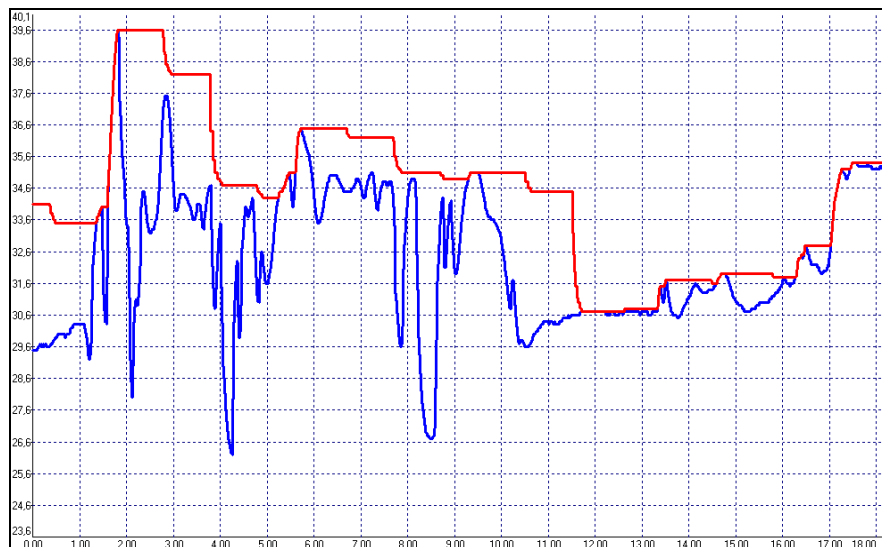

— **TProcess with Peak Hold (Hold time = 1s)**
— **TActual without post processing**



OPEARTING MANUAL

u 0.0	Setup of the Lower limit of temperature range . The minimum difference between lower and upper limit is 20 K . If you set the lower limit to a value $\geq$ upper limit the upper limit will be adjusted to [lower limit + 20 K] automatically.
n 500.0	Setup of the Upper limit of the temperature range . The minimum difference between upper and lower limit is 20 K . The upper limit can only be set to a value = lower limit + 20 K.
0.00	Setup of the Lower limit of the signal output . This setting allows an assignment of a certain signal output level to the lower limit of the temperature range. The adjustment range corresponds to the selected output mode (e.g. 0-5 V).
5.00	Setup of the Upper limit of the signal output . This setting allows an assignment of a certain signal output level to the upper limit of the temperature range. The adjustment range corresponds to the selected output mode (e.g. 0-5 V).
U °C	Setup of the Temperature unit [°C or °F].
30.0	Setup of the Lower alarm limit . This value corresponds to Alarm 1 ► 5.6 Alarms] and is also used as threshold value for relay 1 (if the optional relay board is used).
100.0	Setup of the Upper alarm limit . This value corresponds to Alarm 2 ► 5.6 Alarms] and is also used as threshold value for relay 2 (if the optional relay board is used).
XHEAD	Setup of the Ambient temperature compensation . In dependence on the emissivity value of the object a certain amount of ambient radiation will be reflected from the object surface. To compensate this impact, this function allows the setup of a fixed value which represents the ambient radiation.



OPERATING MANUAL



Especially if there is a big difference between the ambient temperature at the object and the head temperature the use of **Ambient temperature compensation** is recommended

- | | |
|--------------|--|
| M 01 | Setup of the Multidrop address . In a RS485 network each sensor will need a specific address. This menu item will only be shown if a RS485 interface board is plugged in. For using the RS422 mode, press once the down button on M01 |
| B 9.6 | Setup of the Baud rate for digital data transfer |
| S ON | Activating (ON) and Deactivating (OFF) of an optional Sighting Laser [► 3.3 Further Accessories]. By pressing Up or Down a voltage of 3 VDC will be switched to the 3V SW connection pin on the mainboard.. |



OPEARTING MANUAL



4M Modell

Anzeige	Modus [Beispiel]	Einstellbereich
TPROC 320.9	Process temperature (after signal processing) [320,9 °C]	fixed
T INT 50.1	Detector Temperature [50,1 °C]	fixed
T BOX 38.6	Electronic box Temperature [38,6 °C]	fixed
EMISS 1.000	Emissivity [1,000]	0,100 ... 1,100
TRANS 1.000	Transmissivity [1,000]	0,100 ... 1,100
AVG 0.020	Signal output Average [0,020 s]	AVG 0.000 = inactiv/ 0,1 ... 65 s
HOLD	OFF	OFF/ PEAK/ VALL/ APEAK/ AVALL
H TIM	PEAK/ VALL	0...65 s (65 = infinite)
H TH	APEAK/ AVALL	Starting temperature...end temperature
H HY	APEAK/ AVALL	Hysteresis setting in °C/°F
U °C	Temperature unit [°C]	°C/ °F
M 01	Multidrop address [1] (only with RS485 interface) RS422 mode	01...32 RS422 (Press Down button on M01)
BAUD 115.2K	Baud rate in kBaud [115]	115.2 / 921.6 kBaud
S ON	Laser Sighting	ON/ OFF



OPEARTING MANUAL



EMISS 1.000	Setup of Emissivity . Pressing Up increases the value, Down decreases the value (also valid for all further functions). The emissivity is a material constant factor to describe the ability of the body to emit infrared energy ► 10 Emissivity
TRANS 1.000	Setup of Transmissivity . This function is used if an optical component (protective window, additional optics e.g.) is mounted between sensor and object. The standard setting is 1.000 = 100 % (if no protective window etc. is used).
AVG 0.020	Setup of Average time . In this mode an arithmetic algorithm will be performed to smoothen the signal. The set time is the time constant. This function can be combined with all other post processing functions. The shortest value is 0,001 s. If the value is set to 0.0 the function is deactivated.
HOLD	Setup of signal processing . By pressing Up or Down the mode can be selected. PEAK: Setup of Peak hold . In this mode the sensor is waiting for descending signals. If the signal descends the algorithm maintains the previous signal peak for the specified time. After the hold time the signal will drop down to the second highest value or will descend by 1/8 of the difference between the previous peak and the minimum value during the hold time. This value will be held again for the specified time. After this the signal will drop down with slow time constant and will follow the current object temperature. If the value is set to 0.0 the display will show --- (function deactivated). VALL: Setup of Valley hold . In this mode the sensor waits for ascending signals. The definition of the algorithm is according to the peak hold algorithm (inverted). If the value is set to 0.0 the function deactivated. APEAK (Advanced Peak Hold): In this mode the sensor waits for local peak values. Peak values which are lower than their predecessors will only be taken over if the temperature has fallen below the Threshold value beforehand. If Hysteresis is activated a peak in addition must decrease by the value of the hysteresis before the algorithm takes it as a new peak value. AVALL (Advanced Valley Hold): This mode is the inverted function of Advanced Peak hold. The sensor waits for local minima. Minimum values which are higher than their predecessors will only be taken over if the temperature has exceeded the Threshold value beforehand. If Hysteresis is activated a minima in addition must increase by the



OPERATING MANUAL



Operating 81- value of the hysteresis before the algorithm takes it as a new minimum value.

M 01	Setup of the Multidrop address . In a RS485 network each sensor will need a specific address. This menu item will only be shown if a RS485 interface board is plugged in. For using the RS422 mode, press once the down button on M01
BAUD 115.2K	Setup of the Baud rate for digital data transfer
S OFF	Activating (ON) and Deactivating (OFF) of an optional Sighting Laser ► 3.3 Further Accessories]. By pressing Up or Down a voltage of 3 VDC will be switched to the 3V SW connection pin on the mainboard.

Peak Picking-Function


For a detection of fast hotspots (detection time 90 µs) the averaging time must be set to 0.0 s.

You can display the process temperature TProc (with post processing) and also the current average temperature TAvg (without any post processing) in the diagram. In this way the result and functionality of the selected post processing features can easily be traced and controlled.



OPEARTING MANUAL

Signal-Graph

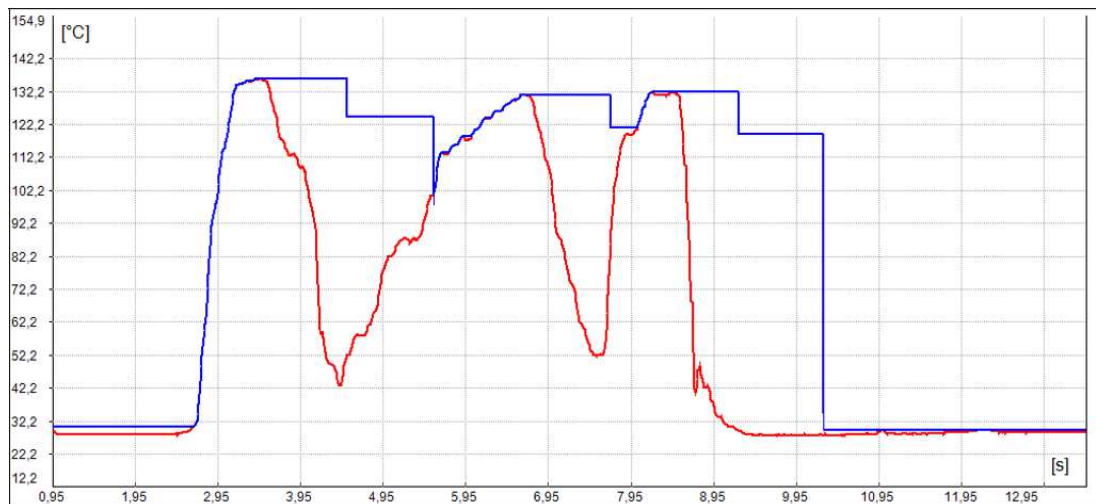


— T_{Proc} with Peak Hold (Hold time = 1s)

— T_{Avg} without post processing



OPEARTING MANUAL

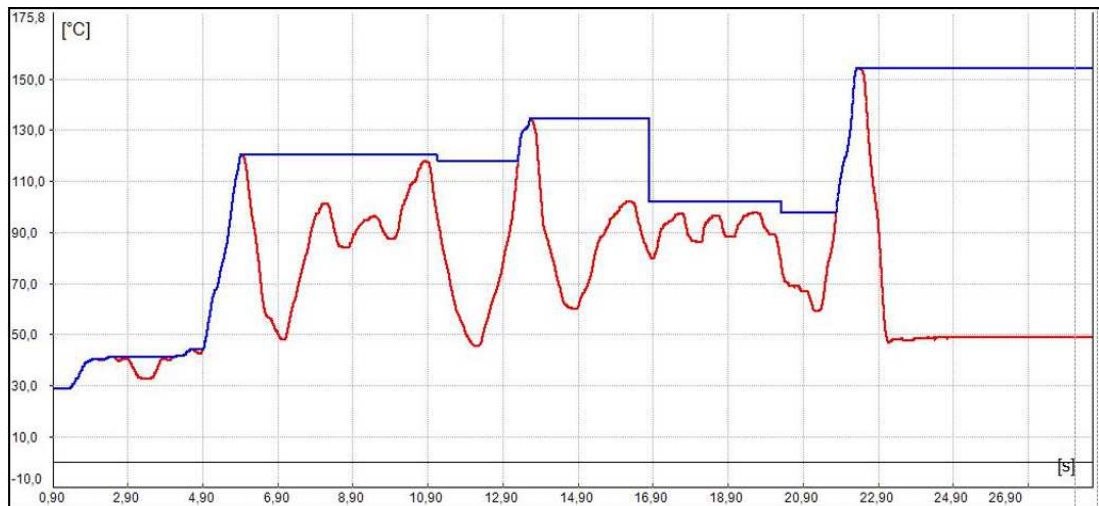

— T_{Proc} with Advanced peak hold (Threshold = 80 °C/ Hysteresis = 20 °C)
— T_{Avg} without post processing



OPEARTING MANUAL



6.2 Error Messages

The display of the sensor can show the following error messages:

LT/ G5/ P3/ P7 models

Display	Meaning
OVER	Object temperature too high
UNDER	Object temperature too low
^^^CH	Head temperature too high
vvvCH	Head temperature too low

1M/ 2M/ 3M models:

1. Digit	Meaning	2. Digits	Meaning
0x	No error	x0	No error
1x	Head temperature probe short circuit to GND	x2	Object temperature too high
2x	Box temperature too low	x4	Head temperature too low
4x	Box temperature too high	x8	Head temperature too high
6x	Box temperature probe disconnected	xC	Head temperature probe disconnected
8x	Box temperature probe short circuit to GND		



OPERATING MANUAL



7 Software CompactConnect/ CompactPlus Connect

7.1 Installation

Minimale Systemvoraussetzungen:

- Windows XP, Vista, 7, 8, 10
- USB-Schnittstelle
- Festplatte mit mind. 30 MByte Speicherplatz
- Mindestens 128 MByte RAM

The software can be downloaded under <https://www.bb-sensors.com/downloads>. Unzip and open the program and start the CDsetup.exe. Follow the instructions of the wizard until the installation is finished.

The installation wizard will place a launch icon on the desktop and in the start menu: [Start]\Programs\CompactConnect or [Start]\Programs\CompactPlus Connect.


If you want to uninstall the software from your system, please use the uninstall icon in the start menu.

- **A detailed description is provided on the downloaded software package.**
- **Software CompactConnect for LT/ LTF/ LTH/ 1M/ 2M/ 3M/ G5/ P3/ P7**
- **Software CompactPlus Connect for 4M**




OPEARTING MANUAL

Main Features:

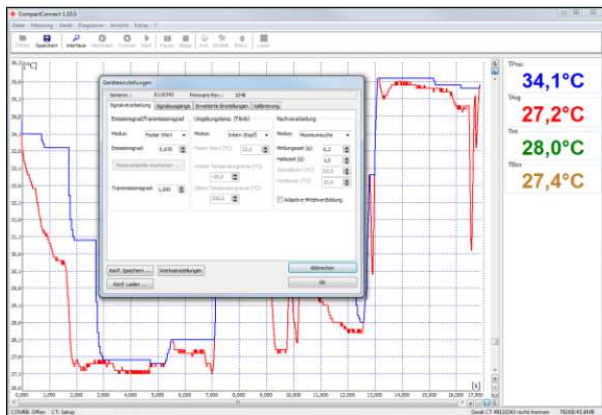

CompactConnect

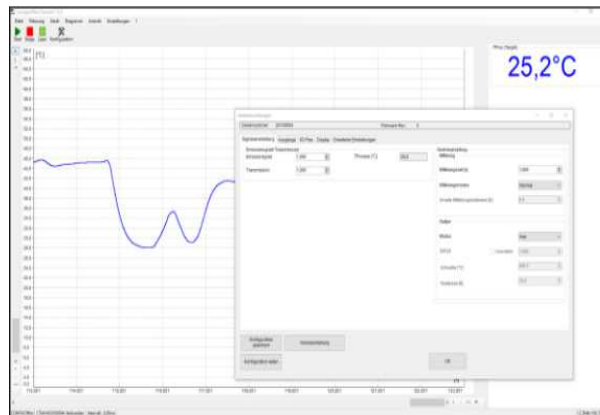

CompactPlus Connect

- Graphic display for temperature trends and automatic data logging for analysis and documentation
- Complete sensor setup and remote controlling Adjustment of signal processing functions

Programming of outputs and functional inputs



OPEARTING MANUAL



7.2 Communication Settings

7.2.1 Serial Interfaces

Baudrate	9,6...115,2 kBaud (adjustable on the unit or via Software) DM 4M: 115,2 or 921,6 kBaud (adjustable on the unit or via software)
Data bits	8
Parity	NONE
Stop bits	1
Flow controll	OFF

7.2.2 Protocol

All sensors of the DM series are using a binary protocol. Alternatively, they can be switched to an ASCII protocol (only LT versions). To get a fast communication the protocol has no additional overhead with CR, LR or ACK bytes.

7.2.3 ASCII-Protocol

The models **LT21**, **LT151**, **LT201**, **LT21H** and **LT101H** can be switched to ASCII by changing the first figure of block 3 of the head calibration code. This figure has to be changed from **0** to **4** (old sensing head) or **8** to **C** (new sensing head). ► **4.3 Exchange of the Sensing Head**

Example (new Sensing head): Binary-Protocol: A6FG – 22KB – **8**AS0
1.Block 2.Block 3.Block
ASCII-Protokoll: A6FG – 22KB – **C**AS0
1.Block 2.Block 3.Block



OPERATING MANUAL



After you have modified the head code a reset is necessary to activate the change. ► 6 Operating]

To switch to the ASCII protocol you can use also the following command:

Decimal: 131
HEX: 0x83
Data, Answer: byte 1
Result: 0 – Binary-Protocol
1 – ASCII-Protocol

7.2.4 Saving of parameter settings

After power on of the DM sensor the flash mode is active. It means, changed parameter settings will be saved in the DM-internal Flash-EEPROM and will be kept also after the sensor is switched off.

In case settings should be changed quite often or continuously the flash mode can be switched off by using the following command:

Decimal: 112
HEX: 0x70
Data, Answer: byte 1
Result: 0 – Data will not be written in the Flash
1 – Data will be written in the Flash

If the flash mode is deactivated, all settings will only be kept as long as the unit is powered. If the unit is switched off and powered on again all previous settings are lost. The command 0x71 will poll the current status.

You will find a detailed protocol and command description on the software package in the directory: \Commands.



8 Basics of Infrared Thermometry

Depending on the temperature each object emits a certain amount of infrared radiation. A change in the temperature of the object is accompanied by a change in the intensity of the radiation. For the measurement of “thermal radiation” infrared thermometry uses a wave-length ranging between 1 μm and 20 μm . The intensity of the emitted radiation depends on the material. This material contingent constant is described with the help of the emissivity which is a known value for most materials (► **10 Emissivity**)

Infrared thermometers are optoelectronic sensors. They calculate the surface temperature on the basis of the emitted infrared radiation from an object. The most important feature of infrared thermometers is that they enable the user to measure objects contactless. Consequently, these products help to measure the temperature of inaccessible or moving objects without difficulties. Infrared thermometers basically consist of the following components:

- Lens
- Spectral filter
- Detector
- Electronic (Amplification/ Linearisation / Signal Processing)

The specifications of the lens decisively determine the optical path of the infrared thermometer, which is characterized by the ratio Distance to Spot size.

The spectral filter selects the wavelength range, which is relevant for the temperature measurement. The detector in cooperation with the processing electronics transforms the emitted infrared radiation into electrical signals.

OPEARTING MANUAL



9 Emissivity

9.1 Definition

The intensity of infrared radiation, which is emitted by each body, depends on the temperature as well as on the radiation features of the surface material of the measuring object. The emissivity (ϵ – Epsilon) is used as a material constant factor to describe the ability of the body to emit infrared energy. It can range between 0 and 100 %. A “blackbody” is the ideal radiation source with an emissivity of 1,0 whereas a mirror shows an emissivity of 0,1.

If the emissivity chosen is too high, the infrared thermometer may display a temperature value which is much lower than the real temperature – assuming the measuring object is warmer than its surroundings. A low emissivity (reflective surfaces) carries the risk of inaccurate measuring results by interfering infrared radiation emitted by background objects (flames, heating systems, chamottes). To minimize measuring errors in such cases, the handling should be performed very carefully and the unit should be protected against reflecting radiation sources.

9.2 Determination of unknown Emissivity

- ▶ First, determine the actual temperature of the measuring object with a thermocouple or contact sensor. Second, measure the temperature with the infrared thermometer and modify the emissivity until the displayed result corresponds to the actual temperature.
- ▶ If you monitor temperatures of up to 380 °C you may place a special plastic sticker (emissivity dots – part number: ACLSED) onto the measuring object, which covers it completely. Now set the emissivity to 0,95 and take the temperature of the sticker. Afterwards, determine the temperature of the adjacent area on the measuring object and adjust the emissivity according to the value of the temperature of the sticker
- ▶ Cover a part of the surface of the measuring object with a black, flat paint with an emissivity of 0,98. Adjust the emissivity of your infrared thermometer to 0,98 and take the temperature of the colored surface. Afterwards, determine the temperature of a directly adjacent area and modify the emissivity until the measured value corresponds to the temperature of the colored surface.



OPEARTING MANUAL



CAUTION: On all three methods the object temperature must be different from ambient temperature.

9.3 Characteristic Emissivity

In case none of the methods mentioned above help to determine the emissivity you may use the emissivity tables ► **Appendix A – Table of Emissivity for metals** and **Appendix B – Table of Emissivity for non-metals**. These are average values, only. The actual emissivity of a material depends on the following factors:

- temperature
- measuring angle
- geometry of the surface
- thickness of the material
- constitution of the surface (polished, oxidized, rough, sandblast)
- spectral range of the measurement
- transmissivity (e.g. with thin films)



OPEARTING MANUAL



Appendix A – Emissivity for metals

Material		typical Emissivity			
Spectrale respons		1,0 µm	1,6 µm	5,1 µm	8-14 µm
Aluminium	not oxidized	0,1-0,2	0,02-0,2	0,02-0,2	0,02-0,1
	polished	0,1-0,2	0,02-0,1	0,02-0,1	0,02-0,1
	roughened	0,2-0,8	0,2-0,6	0,1-0,4	0,1-0,3
	oxidized	0,4	0,4	0,2-0,4	0,2-0,4
Blei	polished	0,35	0,05-0,2	0,05-0,2	0,05-0,1
	roughened	0,65	0,6	0,4	0,4
	oxidized		0,3-0,7	0,2-0,7	0,2-0,6
Chrom		0,4	0,4	0,03-0,3	0,02-0,2
Eisen	not oxidized	0,35	0,1-0,3	0,05-0,25	0,05-0,2
	rusted		0,6-0,9	0,5-0,8	0,5-0,7
	oxidized	0,7-0,9	0,5-0,9	0,6-0,9	0,5-0,9
	forged, blunt	0,9	0,9	0,9	0,9
	melted	0,35	0,4-0,6		
Eisen, gegossen	not oxidized	0,35	0,3	0,25	0,2
	oxidized	0,9	0,7-0,9	0,65-0,95	0,6-0,95
Gold		0,3	0,01-0,1	0,01-0,1	0,01-0,1
Haynes Alloy		0,5-0,9	0,6-0,9	0,3-0,8	0,3-0,8
Inconel	elektropoliert	0,2-0,5	0,25	0,15	0,15
	Sandblasted	0,3-0,4	0,3-0,6	0,3-0,6	0,3-0,6
	oxidized	0,4-0,9	0,6-0,9	0,6-0,9	0,7-0,95



OPEARTING MANUAL



Material		typical emissivity			
Spectral sensitivity		1,0 μm	1,6 μm	5,1 μm	8-14 μm
Kupfer	polished	0,05	0,03	0,03	0,03
	roughened	0,05-0,2	0,05-0,2	0,05-0,15	0,05-0,1
	oxidized	0,2-0,8	0,2-0,9	0,5-0,8	0,4-0,8
Magnesium		0,3-0,8	0,05-0,3	0,03-0,15	0,02-0,1
Messing	polished	0,35	0,01-0,5	0,01-0,05	0,01-0,05
	roughened	0,65	0,4	0,3	0,3
	oxidized	0,6	0,6	0,5	0,5
Molybdän	nicht oxidiert	0,25-0,35	0,1-0,3	0,1-0,15	0,1
	oxidized	0,5-0,9	0,4-0,9	0,3-0,7	0,2-0,6
Monel (Ni-Cu)		0,3	0,2-0,6	0,1-0,5	0,1-0,14
Nickel	electrolytic	0,2-0,4	0,1-0,3	0,1-0,15	0,05-0,15
	oxidized	0,8-0,9	0,4-0,7	0,3-0,6	0,2-0,5
Platin	black		0,95	0,9	0,9
Quecksilber			0,05-0,15	0,05-0,15	0,05-0,15
Silber		0,04	0,02	0,02	0,02
Stahl	polished sheet				
	metal	0,35	0,25	0,1	0,1
	stainless	0,35	0,2-0,9	0,15-0,8	0,1-0,8
	Grobblech			0,5-0,7	0,4-0,6
	Cold Rolled	0,8-0,9	0,8-0,9	0,8-0,9	0,7-0,9



OPEARTING MANUAL



	oxidized	0,8-0,9	0,8-0,9	0,7-0,9	0,7-0,9
Titan	polished	0,5-0,75	0,3-0,5	0,1-0,3	0,05-0,2
	oxidized		0,6-0,8	0,5-0,7	0,5-0,6
Wolfram	polished	0,35-0,4	0,1-0,3	0,05-0,25	0,03-0,1
Zink	polished	0,5	0,05	0,03	0,02
	oxidized	0,6	0,15	0,1	0,1
Zinn	not oxidized	0,25	0,1-0,3	0,05	0,05

Appendix B – Emissivity for not Metals

Material		typical emissivity			
Spectral sensitivity		1,0 µm	2,2 µm	5,1 µm	8-14 µm
Asbestos		0,9	0,8	0,9	0,95
Asphalt				0,95	0,95
Basalt				0,7	0,7
Concrete		0,65	0,9	0,9	0,95
Ice					0,98
Earth					0,9-0,98
Paint non-alkaline					0,9-0,95
Plaster				0,4-0,97	0,8-0,95
Glass	Disk		0,2	0,98	0,85
	Melt		0,4-0,9	0,9	
Rubber				0,9	0,95
Wood natural				0,9-0,95	0,9-0,95



OPEARTING MANUAL



Limestone			0,4-0,98	0,98
Karborund		0,95	0,9	0,9
Ceramics	0,4	0,8-0,95	0,8-0,95	0,95
Kies			0,95	0,95
Kohlenstoff	nicht oxidiert	0,8-0,9	0,8-0,9	0,8-0,9
	Graphit	0,8-0,9	0,7-0,9	0,7-0,8
Plastic >50 µm	opaque		0,95	0,95
Paper	Any color		0,95	0,95
Sand			0,9	0,9
Schnee				0,9
Textilies			0,95	0,95
Water				0,93




OPEARTING MANUAL




Appendix C – Smart Averaging

The average function is generally used to smoothen the output signal. With the adjustable parameter time this function can be optimal adjusted to the respective application. One disadvantage of the average function is that fast temperature peaks which are caused by dynamic events are subjected to the same averaging time. Therefore those peaks can only be seen with a delay on the signal output.

The function **Smart Averaging** eliminates this disadvantage by passing those fast events without averaging directly through to the signal output.

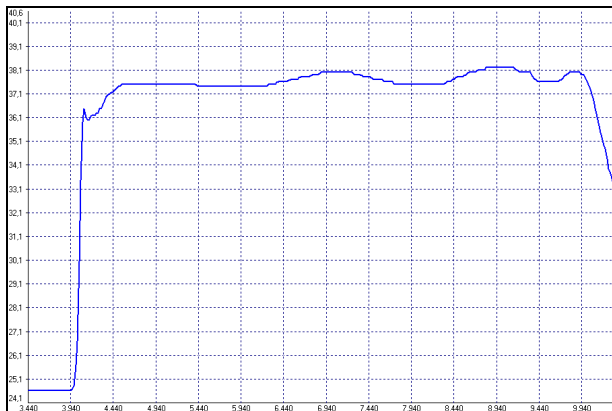

Signal graph with Smart Averaging function

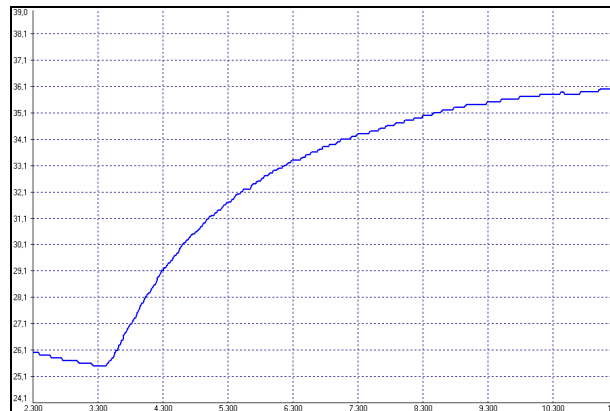

Signal graph without Smart Averaging function

